

# TrueConf Room

## User guide



Version 4.2

# Table of Contents

<b>1. What is TrueConf Room</b>	<b>5</b>
1.1. What TrueConf Room is used for	5
1.2. Connection structure	5
1.3. TrueConf Room features	5
<b>2. TrueConf Room introduction</b>	<b>8</b>
2.1. Main screen	8
2.2. Control panel	9
2.3. Roles and permissions	9
<b>3. TrueConf Room deployment</b>	<b>11</b>
3.1. Server deployment	11
3.2. TrueConf Room installation	11
3.2.1. For Windows	11
3.2.2. For Linux	12
3.2.3. Changing the port	14
<b>4. Launching the application for the first time</b>	<b>15</b>
4.1. Launching TrueConf Room	15
4.2. Logging in to the control panel	15
4.3. Authorization	16
<b>5. Initial settings</b>	<b>18</b>
5.1. Settings sidebar	18
5.2. Audio and video settings	18
5.2.1. Video	18
5.2.2. Audio	19
5.3. Virtual background and background blurring	20
5.3.1. Background blurring	20
5.3.2. Virtual background	21
5.4. Connection settings	21
<b>6. Getting started</b>	<b>23</b>
6.1. Logging in to the control panel	23
6.2. Sharing content from a capture card	23
6.3. Using command line parameters	23
<b>7. Making a call</b>	<b>24</b>
7.1. How to make calls	24
7.2. How to call a device by IP/number	24
7.2.1. Video conferencing endpoints	25
7.2.2. Phones	25
7.2.3. IP cameras	25
<b>8. Joining and creating a conference</b>	<b>26</b>
8.1. How to join a meeting	26
8.1.1. With a QR code	26
8.2. How to create a conference	26

<b>9. Notification center</b>	<b>28</b>
<b>10. How to interact with a list of participants</b>	<b>29</b>
10.1. View the list of participants	29
10.2. Adding participants	29
10.3. Send DTMF command	30
10.3.1. Option 1	31
10.3.2. Option 2	31
10.4. Managing and changing participants' audio and video devices	31
<b>11. Conference layout management</b>	<b>33</b>
11.1. Changing video layout	33
11.2. Changing the priority window	33
11.3. Dragging video windows to a different screen	33
11.3.1. Option 1	34
11.3.2. Option 2	35
<b>12. Managing devices</b>	<b>36</b>
12.1. Selecting devices	36
12.2. PTZ camera control	36
12.2.1. Presets	36
12.2.2. Gestures	37
12.3. Controlling participant's camera	38
<b>13. Sharing content and slides</b>	<b>39</b>
<b>14. Sending and receiving content via NDI</b>	<b>41</b>
14.1. Streaming the general layout	41
14.2. Streaming a slideshow	41
14.3. Streaming a participant's video window	41
14.4. Receiving an NDI stream	41
<b>15. Additional settings</b>	<b>42</b>
15.1. Preferences settings	42
15.2. Tools	42
15.2.1. QR code for joining a conference	42
15.3. System information	42
15.4. Device control	43
15.5. Main screen view	43
<b>16. Secure authorization</b>	<b>44</b>
16.1. Security levels	44
16.2. Security types	44
<b>17. TrueConf Room Service</b>	<b>45</b>
17.1. What TrueConf Room is used for	45
17.2. Launch parameters	46
<b>18. Room Discovery</b>	<b>47</b>
18.1. What TrueConf Room is used for	47
18.2. Installation	47
18.3. Use	47

18.3.1. Main screen	47
18.3.2. Control panel	48
<b>19. TrueConf Room PRO</b>	<b>49</b>
19.1. What is TrueConf Room PRO?	49
19.2. How to purchase TrueConf Room PRO	49
19.3. Trial license activation	49
19.4. Offline activation	51

# 1. What is TrueConf Room

## 1.1. What TrueConf Room is used for

TrueConf Room is an application for video conferencing in meeting rooms. This software-based solution provides all essential features of a room endpoint.

TrueConf Room is mainly designed for displaying conference participants on a large screen in a huddle or meeting room. This application enables users to create and run conferences from their PCs, tablets, or mobile devices by scanning a QR code or following a link.

The main idea behind TrueConf Room is to provide clean and intuitive user interface that does not interfere with the conference screen.

TrueConf Room can be used with Windows or Linux and needs to be connected either to TrueConf Online cloud-based video conferencing solution or TrueConf Server / TrueConf Server Free video collaboration platform.

TrueConf Room is available for free [on our website](#).

## 1.2. Connection structure

\*

This section gives only a general description.

Check out the corresponding sections to learn how each of these connections can be configured:

- [Connection to the video conferencing server](#)
- [Audio and video settings](#)
- [Control panel access settings](#).

To run video conferences, TrueConf Room should be authorized in TrueConf Server or TrueConf Online with a user account.

TrueConf Room is a software solution and does not come with AV peripherals. A microphone and a camera have to be connected to the computer running TrueConf Room.



## 1.3. TrueConf Room features

- Enjoy 4K (Ultra HD) video calls and conferences

- Run meetings with up to 1,000 participants (up to 1,600 using UDP Multicast mode)
- Try different video conferencing modes: video call (point-to-point or one-on-one video conferencing session), video lecture, all-on-screen, and role-based conference
- As a video conferencing server, one can use either TrueConf Online cloud service or the corporate TrueConf Server (including TrueConf Server Free).
- Use QR code or follow the link on the start screen to enter TrueConf Room control panel (also available for mobile devices)
- View your upcoming conferences on the main screen
- Manage TrueConf Room video layouts in real time from desktops or mobiles
- Show slides during a conference (pdf, ppt, pptx, slides)
- Show slides from a participant's laptop over HDMI.
- Wake up your PC monitor when logging into the control panel
- View video layouts in the control panel
- Control PTZ cameras (available for moderators and conference owners)
- Set up different authorization rights for users and administrators (PIN code, password, or unsecured login)
- Control your own camera or microphone. Moderators and conference owners can also control participants' devices.
- During a video conference, participants can request to become speakers, while moderators can manage the meeting roles
- Meeting owners or operators have access to real-time meeting management tools, which allow them to lock layout for all participants or set individual layouts for each user, including SIP/H.323 endpoints and browser participants
- Route video calls through the server (optional)
- Call SIP/H.323 and RTSP devices
- Call VoIP users, landline and mobile phone numbers
- Send DTMF commands
- Use with popular USB peripherals
- Enjoy built-in algorithms of echo cancellation and automatic gain control (AGC)
- Perform audio tests to adjust automatic echo cancellation.
- Use multi-monitor configurations (display the meeting and control panel on different screens, drag and drop separate video windows)
- Manage your address book (search, view information about a contact, delete and block users)
- Explore notification center
- Play with meeting room devices (Lenovo ThinkSmart Hub 500, HP Elite Slice, Logitech Tap)
- Compatible with popular ARM platforms (e.g. Raspberry Pi)
- Create your own UIs to manage the application using the TrueConf Room API
- Configure bandwidth limitation settings
- View information about the system and TrueConf Room license
- Enable secure access for administrators and set up different access rights to work with the application (available in TrueConf Room Pro version)

- Customize the main screen: upload your logo, change the background, hide some UI elements (available in the TrueConf Room Pro version)
- TrueConf Room Pro offline activation
- Control your PC remotely from the TrueConf Room control panel: reboot and shutdown.
- Capture and stream via NDI (available in the TrueConf Room Pro version)
- Join a PIN-protected conference
- Escalate a one-on-one call into a conference
- Enable or disable video and audio from a conference participant
- Pin the main window to the selected screen
- Control multiple TrueConf Room instances with TrueConf Room Discovery in any easy way.
- Use TrueConf Room Service to launch the application with additional parameters.
- Control a PTZ camera with presets and gestures.

## 2. TrueConf Room introduction

### 2.1. Main screen

During a video conference participants' videos are displayed on a screen connected to the computer where TrueConf Room is installed.




When there are no ongoing conferences, the following elements are displayed on the main screen:

- Video from the camera connected to TrueConf Room, or an NDI stream selected instead of the camera
- List of upcoming meetings for the next 24 hours
- Date and time
- A QR code with a link to the [control panel](#)
- Information about the current authorized user
- Design elements

The TrueConf Room screen is then called the **main screen**. [Read below](#) to learn about how to set up the main screen.




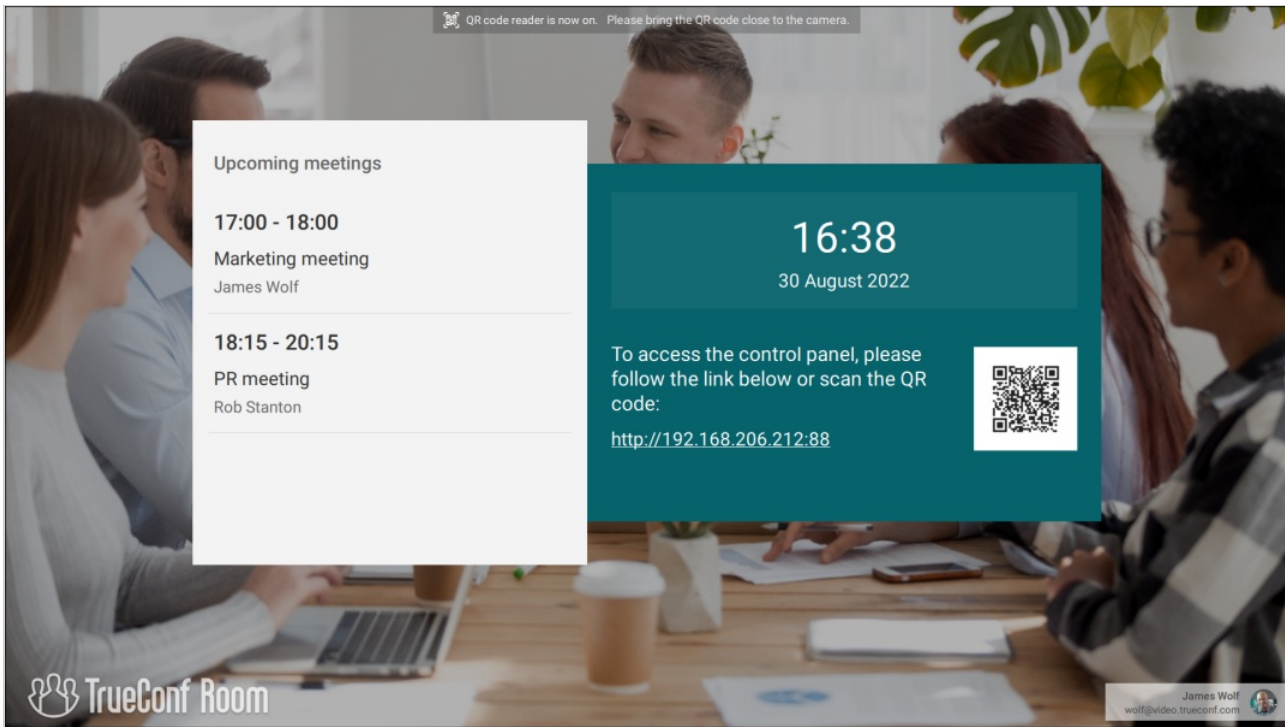

## 2.2. Control panel

The TrueConf Room control panel is a web interface that can be accessed from any device with a web browser. The web interface is powered by a local server run by TrueConf Room and does not require Internet connection. This part of TrueConf Room is called the **control panel**.

You can log in to the control panel [via a link or a QR code](#) displayed on the [main screen](#).

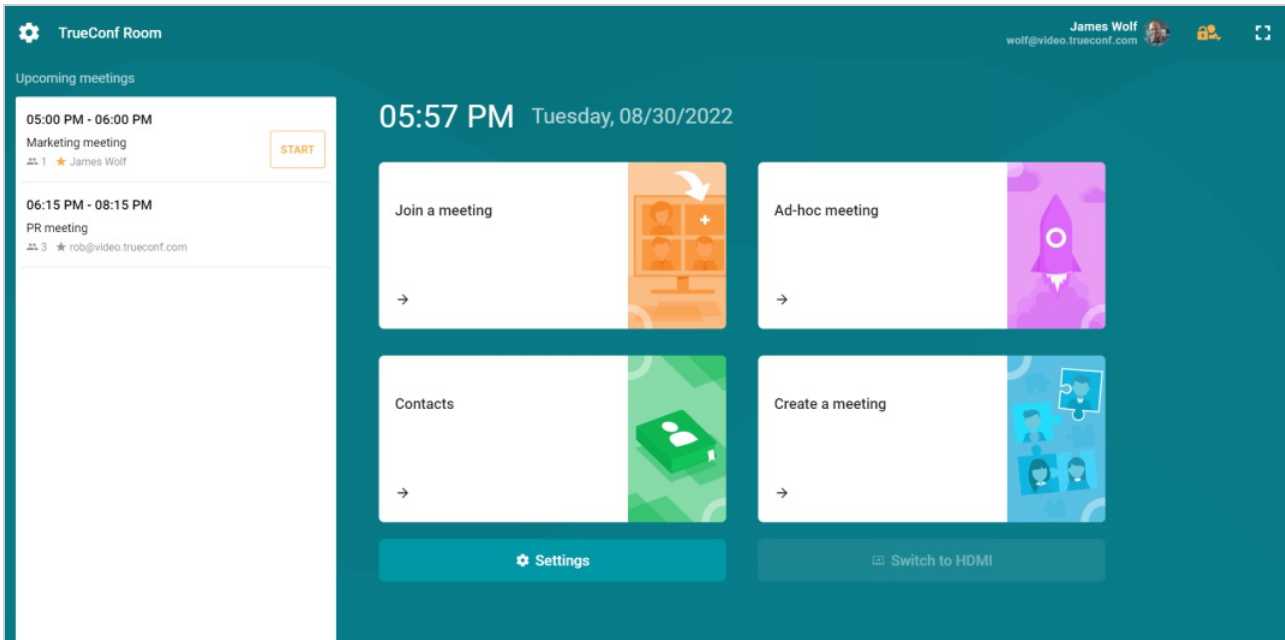

## 2.3. Roles and permissions

You can set different access rights to make sure that users are not able to change important TrueConf Room settings. The application provides two different modes:

- User mode
- Administrator mode.

Only administrators will be able to:

- Connect TrueConf Room to a different TrueConf Server instance
- Change the user account used to authorize TrueConf Room on TrueConf Server
- Set up network parameters
- Change [main screen](#) settings
- Change security settings.



Please check [this section](#) if you want to set up a secure login for TrueConf Room.

- Set up additional audio parameters (enable echo cancellation and choose devices to play app notifications)
- Set up preferences, i.e., application's behavior in standby mode and during video calls and conferences.

In the user mode, you will be able to:

- Change audio and video settings
- Create video conferences
- Call other users
- Upload slides
- Capture and broadcast NDI streams



Please note that user mode is available only in [TrueConf Room Pro](#).

## 3. TrueConf Room deployment

### 3.1. Server deployment

Any video conferencing system includes not only client applications, but also a video conferencing server that facilitates data exchange between these applications. Before setting up TrueConf Room, you should start with the server side of the system.

[TrueConf Online](#) cloud service or [TrueConf Server/TrueConf Server Free](#) can be used as a video conferencing server for TrueConf Room.

\*

All TrueConf Server instances are based on [SVC \(scalable video coding\) architecture](#), enabling efficient video transcoding between different devices.

Your video meetings can be joined not only from conference rooms, but also from PCs and [mobile devices](#).

In addition, TrueConf Server has a built-in gateway for meetings with video conferencing endpoints (via SIP and H.323 protocols) and IP cameras (via RTSP).

i

If you are going to use TrueConf Online cloud-based service, you only need to [sign up on our website](#) and then use your personal account [for authorization](#).

Below you can find information on how to connect to TrueConf Server licences.

Take the following steps to get started with TrueConf Server:

1. Download [TrueConf Server](#) or [TrueConf Server Free](#). Learn more about the benefits of the paid version [on our website](#).
2. Install and launch the server by following the [guide on our website](#).
3. Create an [account](#) for each meeting room. If you are planning to connect participants' personal devices (PCs, smartphones) to conferences or share content during a conference, you should create an account for each of these devices. The number of accounts is unlimited.
4. Test connection to the server [by connecting to it](#) from a client application. If you want the server and TrueConf Room to be in different local networks or communicate via the Internet using a router or NAT, configure appropriate [addressing in the server local network](#) and test connection to the server from outside the network.

### 3.2. TrueConf Room installation

On the [TrueConf Room](#) page, click on the **Download for free** button and fill out the registration form. Then, click on the **Download TrueConf Room** button and follow the instructions for your OS.

#### 3.2.1. For Windows

In the **Windows** tab, download the TrueConf Room installation file by clicking on the corresponding button and then run this file:

# Thank you! What's Next?

Choose your operating system:

Windows

Linux

✓

1

2

3

4

Fill in this form and get a registration key

Download and install TrueConf Room for Windows

Sign in to TrueConf Room with your TrueConf Server or TrueConf Online account

Activate TrueConf Room PRO 21-day trial with your key

Download TrueConf Room 4.0.0.1224 for Windows (64-bit)

Your registration key has been sent to your email address .

During the installation you will be able to:

- Disable automatic app launching when OS is started (this checkbox is marked by default)
- Set a different port for accessing the control panel to make sure you do not use the port occupied by another application

### 3.2.2. For Linux

#### Step 1

Go to the **Linux** tab on the page opened after the [form was filled out](#). There you will find further instructions.

# Thank you! What's Next?

Choose your operating system:

Windows

Linux

✓

2

3

4

**Fill in this form and get a registration key**

**Download and install TrueConf Room for Linux**

You can find TrueConf Room for Linux installation packages and step-by-step guide in our [blog](#).

**Sign in to TrueConf Room with your TrueConf Server or TrueConf Online account**

**Activate your registration key to start TrueConf Room PRO 21-day trial**

Your registration key has been sent to your email address .

Click on the link in the second list item to find detailed [instructions for installing TrueConf Room on Linux](#).

## Step 2

Download the distribution for your OS.

## Step 3

If you want to deploy manually, go to the directory with the installation package and run the following command as the administrator:

```
apt install -yq ./trueconf-room-name.deb
```

where `trueconf-room-name` is the file name.

During the installation, you can set the port for accessing the control panel to make sure that you are not using the port occupied by another application.

## Step 4

The **trueconf-room-web** web server will be added to the OS. It will start automatically after the installation.

Access the TrueConf Room page from a different computer in your local network. You will need to use the following address `http://[ip]:[port]` where `[ip]` is the IP address of the computer with Linux while `[port]` is the port set during the previous step.

**\*** To check the IP address in Linux, run the `ip a` command.

To access the control panel, use the port specified during the installation. If you cannot access the panel via this port, you will need to [set a different port manually](#).

### 3.2.3. Changing the port

If after the installation you have to change the port needed for [accessing the TrueConf Room control panel](#), follow the instructions below.

#### 3.2.3.1. For Windows

1. Go to the `C:\Program Files\TrueConf\Room\httpconf\conf\` folder and open the **listen.conf** file with any text editor (you have to open the file as the administrator).
2. Change the port number in the `Listen <port number>` parameter, e.g., `Listen 8888`. Then, save the changes.
3. Restart the TrueConf Room Web Manager service or restart the PC where the software endpoint is installed.

#### 3.2.3.2. For Linux

1. Go to the `/opt/trueconf/room/etc/webmanager/conf/` directory as the superuser and open the **listen.conf** file with any text editor.
2. Change the port number in the `Listen <port number>` parameter, e.g., `Listen 8888`. Then, save the changes.
3. Restart the web server by running this command:

```
systemctl restart trueconf-room-web
```

sh


## 4. Launching the application for the first time

### 4.1. Launching TrueConf Room

Once TrueConf Room has been launched, the **main screen** will fill the entire desktop, overlaying other applications.



If TrueConf Room is installed on a PC with multiple monitor setup, you can move the main screen to one of the connected monitors. To do it, right-click the program icon in the taskbar and select the monitor in the **Display** menu item.

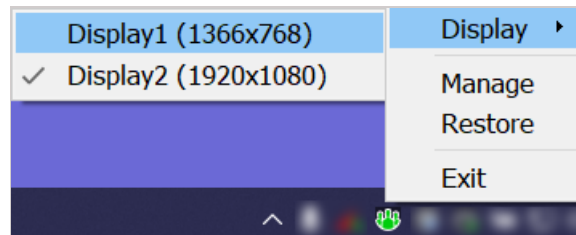

To close or minimize the window, use the hotkey adopted in your OS.




When the main screen is closed, the TrueConf Room **control panel** also stops functioning.

### 4.2. Logging in to the control panel

You can use one of the following options to enter the TrueConf Room **control panel** from your device:

- **Using a QR code.** Scan a QR code with your smartphone or tablet camera. It contains an encoded link to enter the control panel. Follow this link.
- **Using a browser.** You can find the access link next to the QR code. To enter the control panel, simply click on it or enter it into your browser.

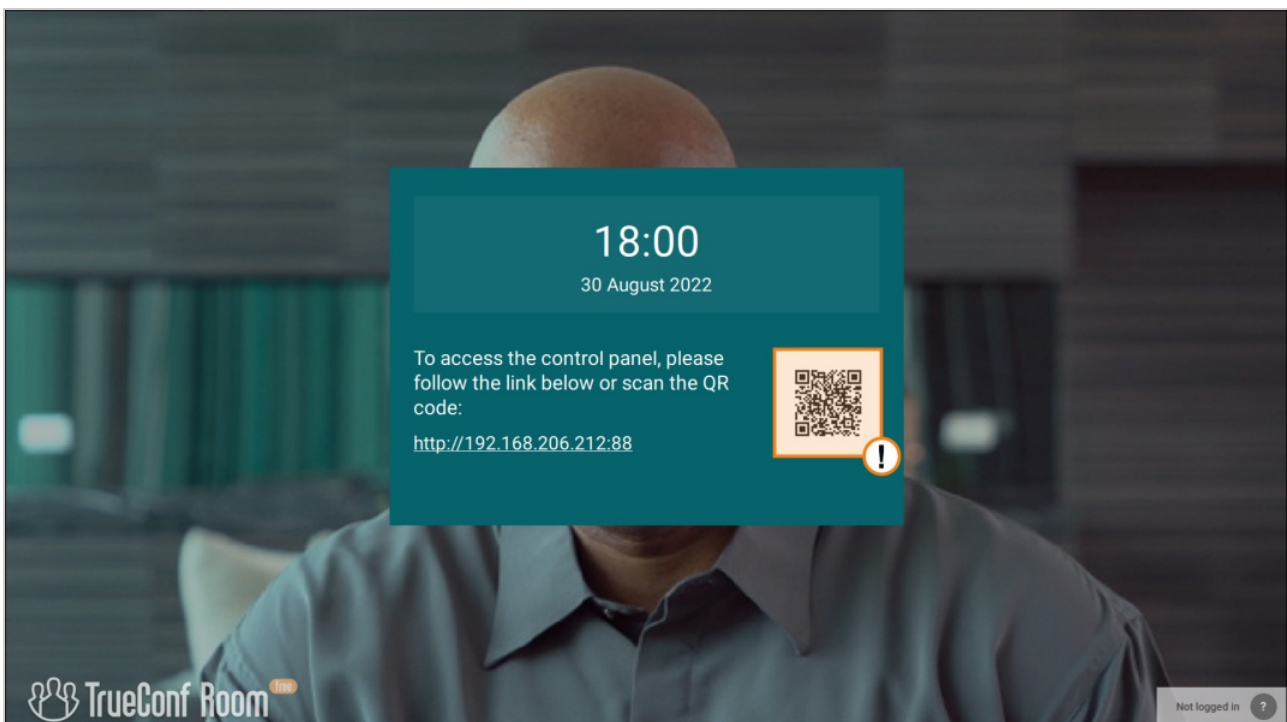




If the link or QR code is not displayed on the main screen, please contact your administrator and ask to provide you with access to the control panel.

### 4.3. Authorization

On the first launch, TrueConf Room [control panel](#) opens on the **authorization page**.

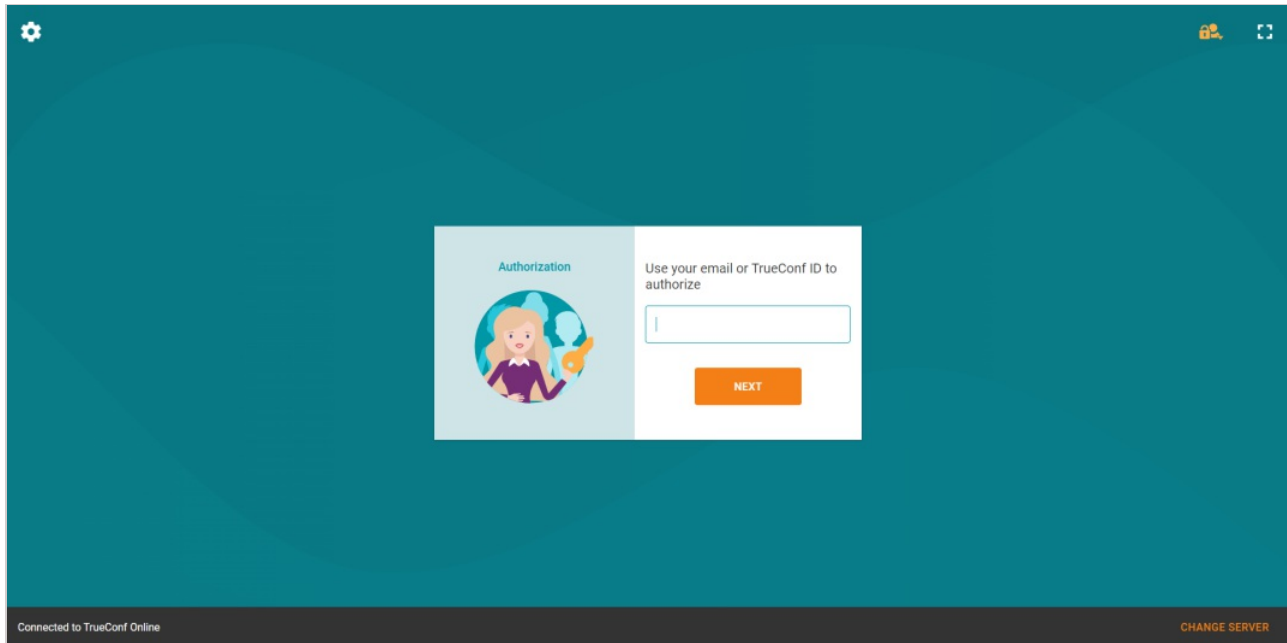

1. Click **Change server** in the right bottom corner of the authorization page.
2. The [network settings](#) page will open.
3. Select the [type of server used](#) and, if it is TrueConf Server, enter its IP address or FQDN.
4. Click **Connect**.
5. Make sure that **Connected to...** is displayed next to the server network settings. If the connection attempt fails and **Not connected** status is displayed, please contact your system administrator.

Active connection

Connected to video.trueconf.com

Connect to:

☐ TrueConf Online cloud service

☒ TrueConf Server

Server address

video.trueconf.com

▼


CONNECT




6. Go back to the authorization page by clicking the arrow icon in the upper-left corner.
7. Enter the TrueConf ID created for the room on your TrueConf Server or in TrueConf Online and the password.

## 5. Initial settings

### 5.1. Settings sidebar

1. [Log in to the TrueConf Room control panel](#).
2. Click the  button in the upper left corner of the control panel.

To select a language go to the **Settings** → **Language** section.

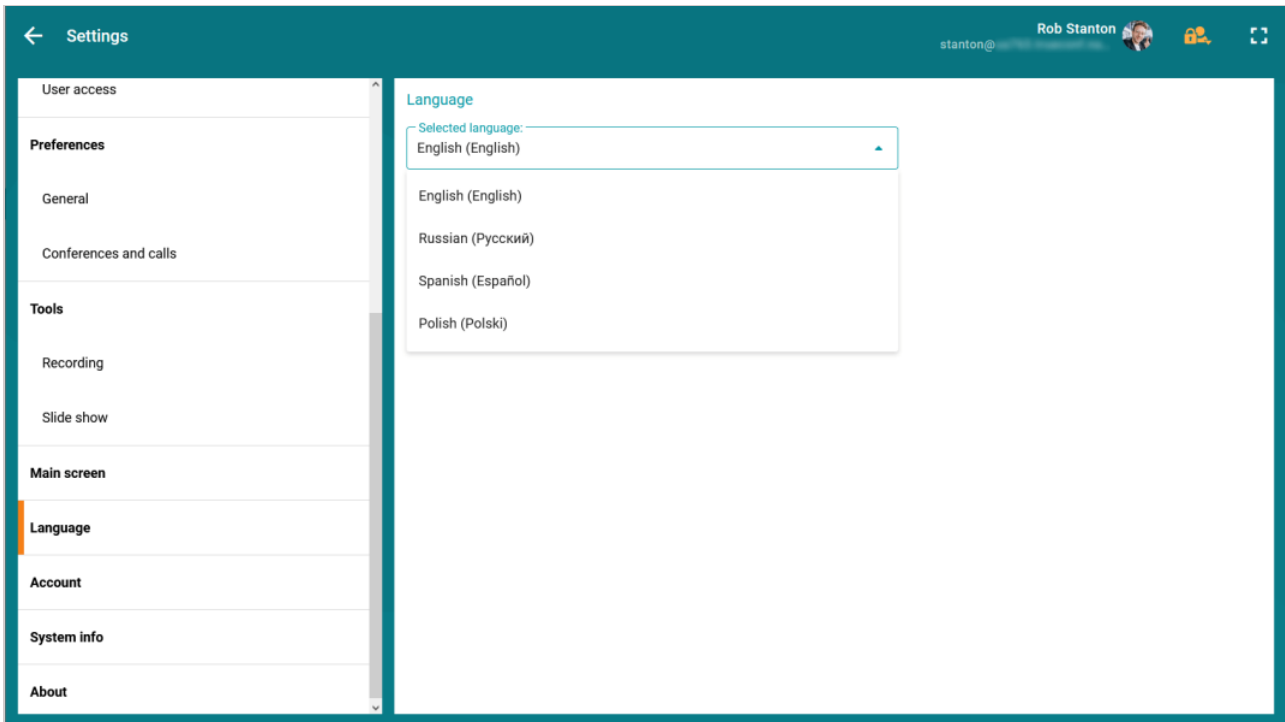


### 5.2. Audio and video settings

#### 5.2.1. Video

Go to the **Audio & video** → **Video** section of the [settings menu](#). Here, you can:

- Select the video devices that will be used by the application
- Enable higher frame rate when previewing video layout in the control panel (disabled by default)

Instead of a camera, you can select an NDI stream available in the local network if this protocol is enabled in the **Settings** → **Tools** → **Main** section.

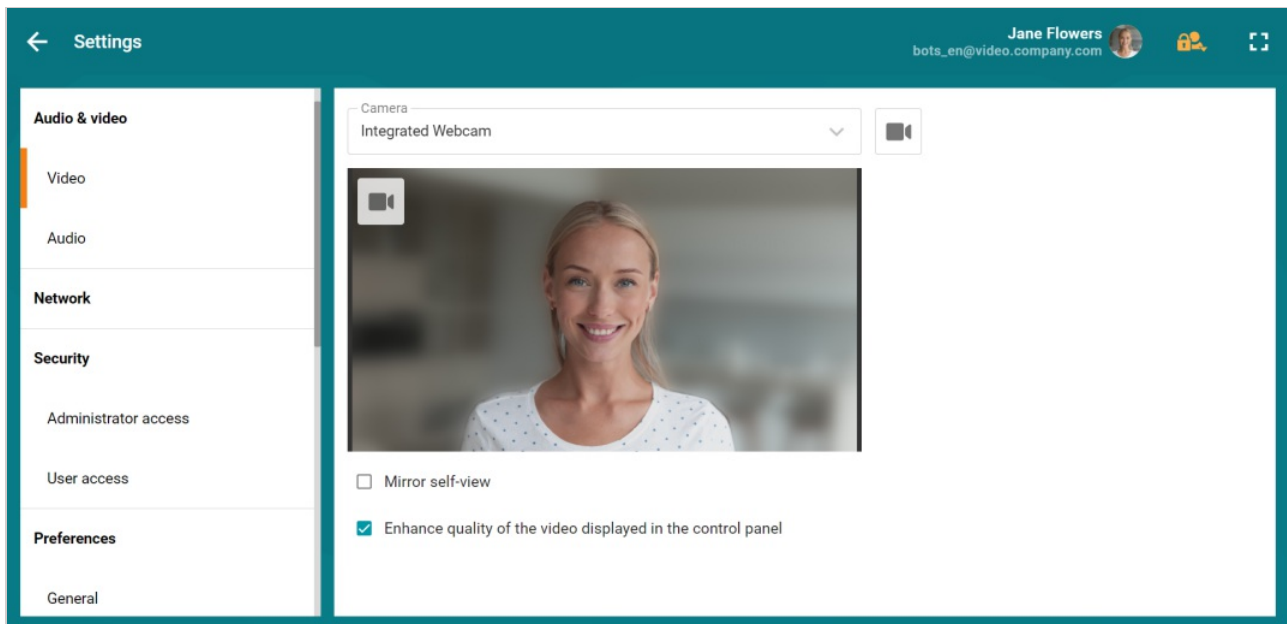

#### 5.2.1.1. Face tracking

TrueConf Room supports [crop the video](#) from the camera so that one can see all participants in the meeting room.

To enable this feature, go to **Settings** → **Tools** → **General** and check the **Face tracking** box.


#### 5.2.2. Audio

Go to the **Audio & video** → **Audio** section in the [settings menu](#). Here, you can:

- Select a device to play back application sounds, e.g., an incoming call
- Set up echo cancellation (enabled by default)

However, if you use a recording device with integrated echo cancellation/AGC mechanisms, we recommend disabling these options in the application to avoid conflicts between the algorithms.

For the echo cancellation algorithm to work properly, you can run an audio test and identify a possible delay. To do this, click **Estimate** at the bottom of the window.

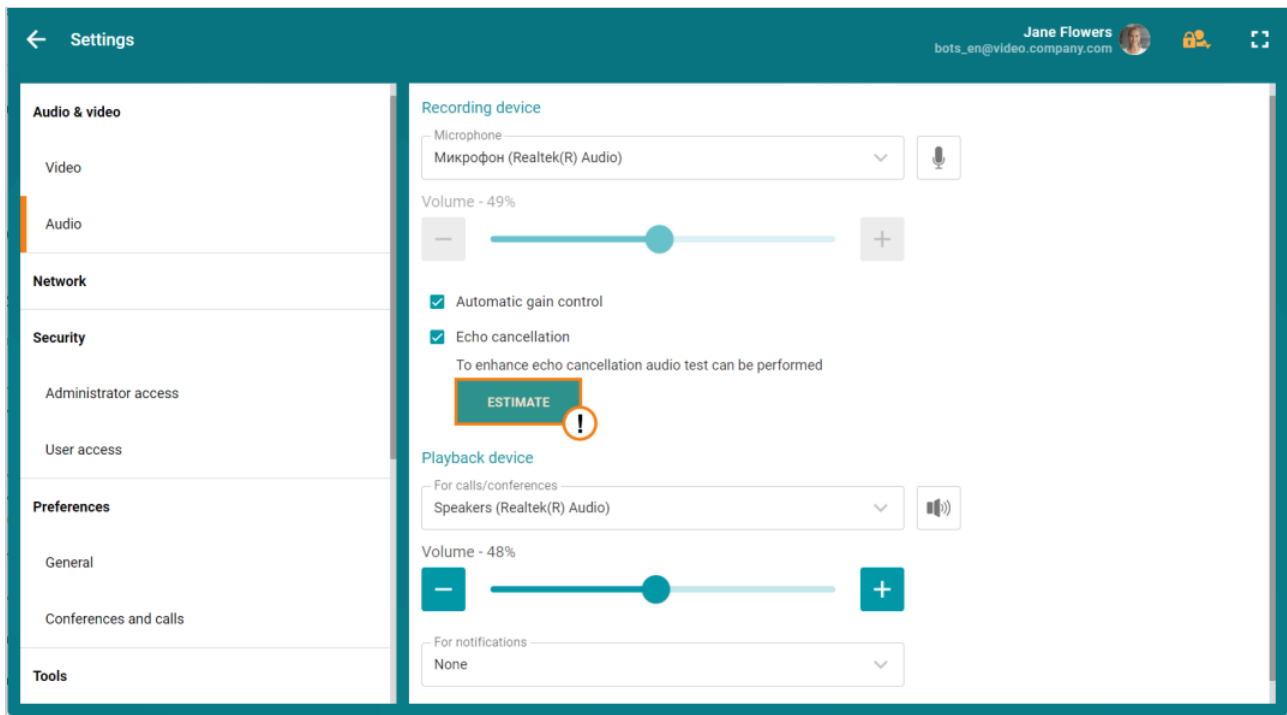

During the testing, you will hear several audio signals from the selected playback device. When the test is successfully completed, the time of delay will be displayed.

You can run the audio test again by clicking the **Restart** button, which will replace the **Estimate** button after the first successful testing.

- \* When selecting 4K video conferencing equipment, read a simple guide to [4K video conferencing](#) in our blog.

## 5.3. Virtual background and background blurring

- i When [cropping](#) is enabled, background blurring and virtual backgrounds are automatically turned off.

- \* For ease of use, you can specify the [launch parameters](#) in the settings of TrueConf Room Service so that you did not have to run TrueConf Room with a command-line parameter repeatedly.

### 5.3.1. Background blurring

TrueConf Room supports background blurring for the video received from the camera.

To do it, run TrueConf Room with the [command-line parameter](#) `--blur`.

```
"C:\Program Files\TrueConf\Room\TrueConfRoom.exe" --blur
```



### 5.3.2. Virtual background


If you want to hide your background, you can replace it with a virtual one. To do it, run TrueConf Room with the [command-line parameter](#) `--background {path-to-image}`.


```
"C:\Program Files\TrueConf\Room\TrueConfRoom.exe" --background C:/image.png
```



### 5.4. Connection settings

Server connection settings are available in the **Network** section of the [settings sidebar](#). Here you can connect TrueConf Room to a different [TrueConf Server instance](#) or TrueConf Online and set the bitrate limit for input and output streams (10 Mbit/s by default).

You can also click on the  button to display the list of available servers.

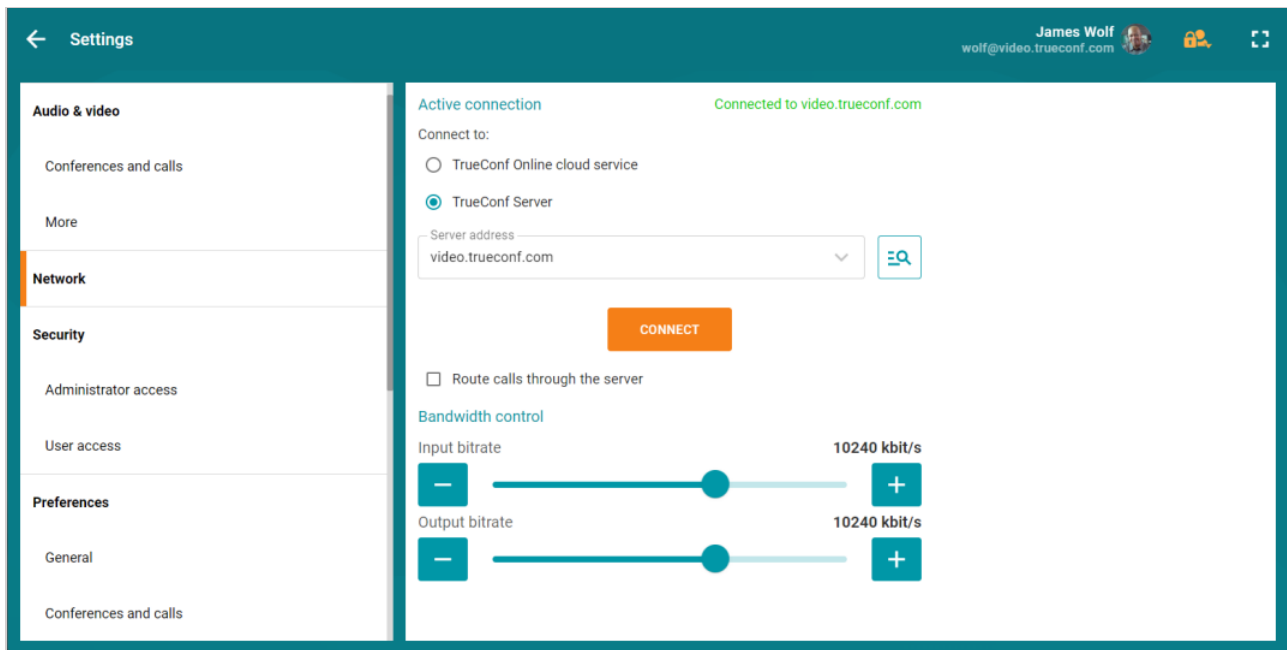

If **Suppress direct connection** checkbox (unmarked by default) is marked, [point-to-point video calls](#) will be routed through the server.


## 6. Getting started

Check the sections above to find the instructions for preliminary configuration of TrueConf Room.

Below you can learn how to use an already installed, [connected and authorized](#) application. The display shows the [main screen](#) of TrueConf Room.

### 6.1. Logging in to the control panel

To use TrueConf Room, you need to open the [control panel](#) on your device:

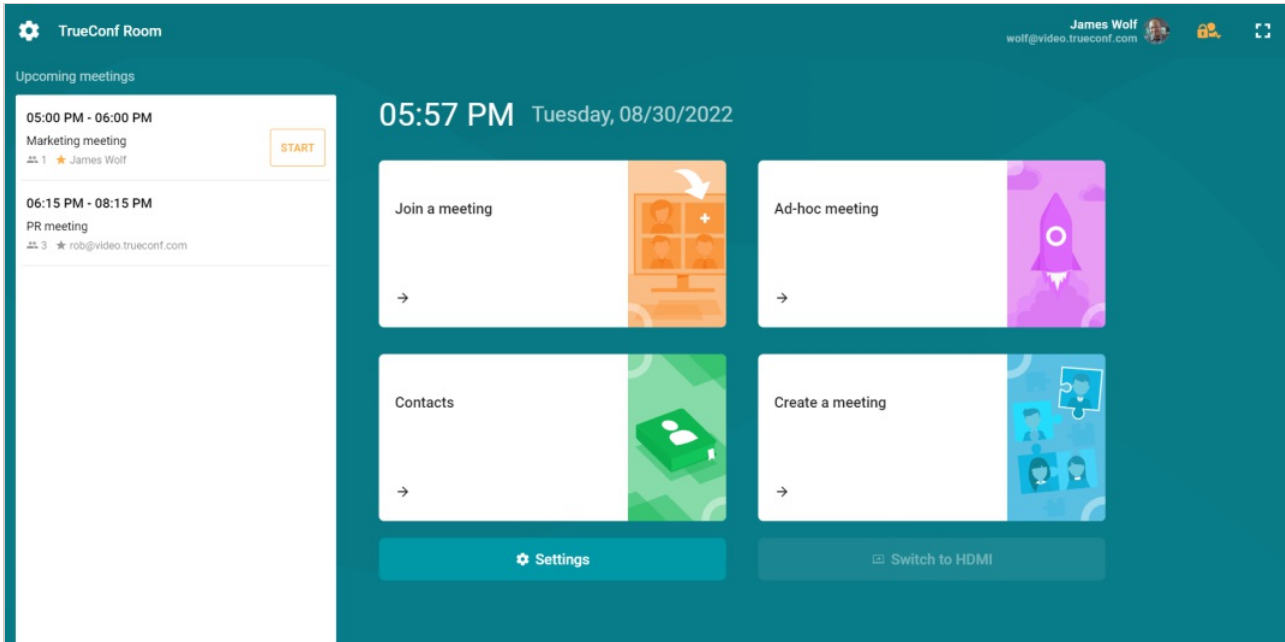

When you enter the control panel, the monitor of a PC with TrueConf Room installed will exit the sleep mode.



If there is no link on the screen, ask the TrueConf Room administrator to provide it.

### 6.2. Sharing content from a capture card

If the computer, where TrueConf Room is installed, has a capture card, you can share content from a laptop via HDMI. To do it, you will need to:

1. Use an HDMI cable to connect the capture card of TrueConf Room to the device that will be used for content sharing.
2. Go to the [control panel](#) and click on the **Switch to HDMI** button. If multiple capture cards are used, you will see a dialogue window where you can select the capture card.

You can share content [during a conference](#) in a similar way.

### 6.3. Using command line parameters

TrueConf Room supports command line parameters just like the client application:

- to learn more about this feature, read [our article](#);
- the list of command-line parameters and their descriptions are provided in the [documentation for TrueConf Room API](#).

## 7. Making a call

### 7.1. How to make calls

How to make a video call:


1. [Log in to the control panel](#).
2. Click the **Contacts** button.
3. Select a user from the address book or enter TrueConf ID.

If necessary, you can add a new user to a meeting. In this case, the call will be automatically transformed into an "all on screen" conference.

Please [read below](#) to learn more about calls to phones and third-party devices.

### 7.2. How to call a device by IP/number

If you want to [call a user](#) or [add conference participants](#), there will be multiple tabs for selecting different devices in addition to the standard address book.

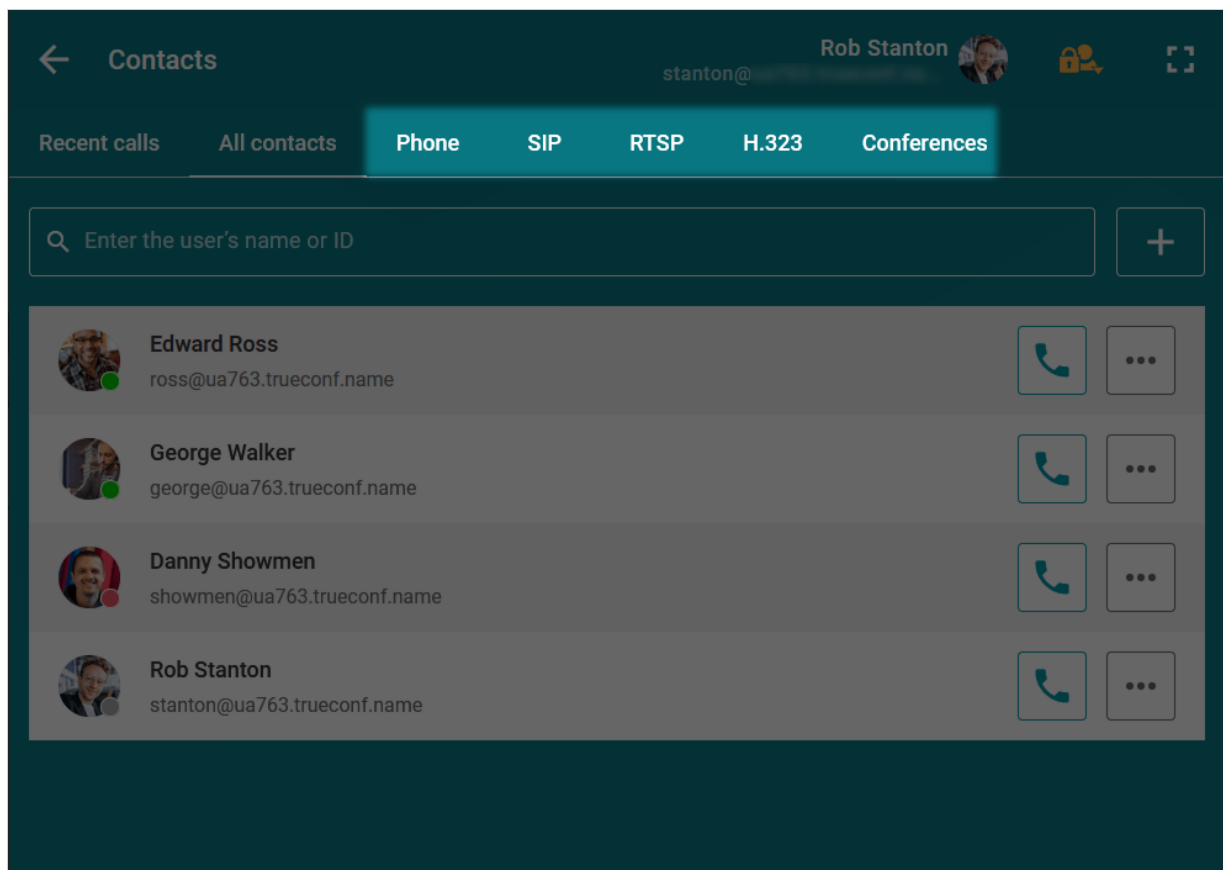

When you switch between tabs in the search field, the prefix of the string identifying the user will change, and you will only need to enter the number and/or IP. The major examples of these strings are presented below.



If you can't reach the user, first of all check [call string format](#) in the TrueConf Server documentation or consult with your system administrator. In addition to what is described in this section, the correct format may have subtle aspects or depend on server settings.



### 7.2.1. Video conferencing endpoints

You can call video conferencing endpoints by their IP address or number (if the [alias](#) has been specified in the settings of the video conferencing server). However, if you [assign default SIP/H.323 servers](#) in the TrueConf Server gateway settings, entering the IP address is optional.

In a particular case, call string formats can be the following:

- `#sip:[user_id]@[server_ip]`
- `#h323:[user_id]@[server_ip]`

For more information, please read [TrueConf Server documentation](#).

### 7.2.2. Phones

If you want to call phones, just enter a user number after the prefix, e.g., `#tel:332` .



You can call phones only if this feature has been enabled in TrueConf Server [settings](#).

### 7.2.3. IP cameras

If you want to call IP cameras (via RTSP), just enter the link to the camera after the prefix, e.g. `#rtsp://10.100.123.100/axis-media/media.amp` .


## 8. Joining and creating a conference

### 8.1. How to join a meeting

To join a meeting, enter the control panel and click the **Join a meeting** button.

Next, you will see the following options to join a meeting:

- Joining with a [conference ID](#)
- Joining a virtual room or scheduled conference
- Calling a conference previously added to the address book

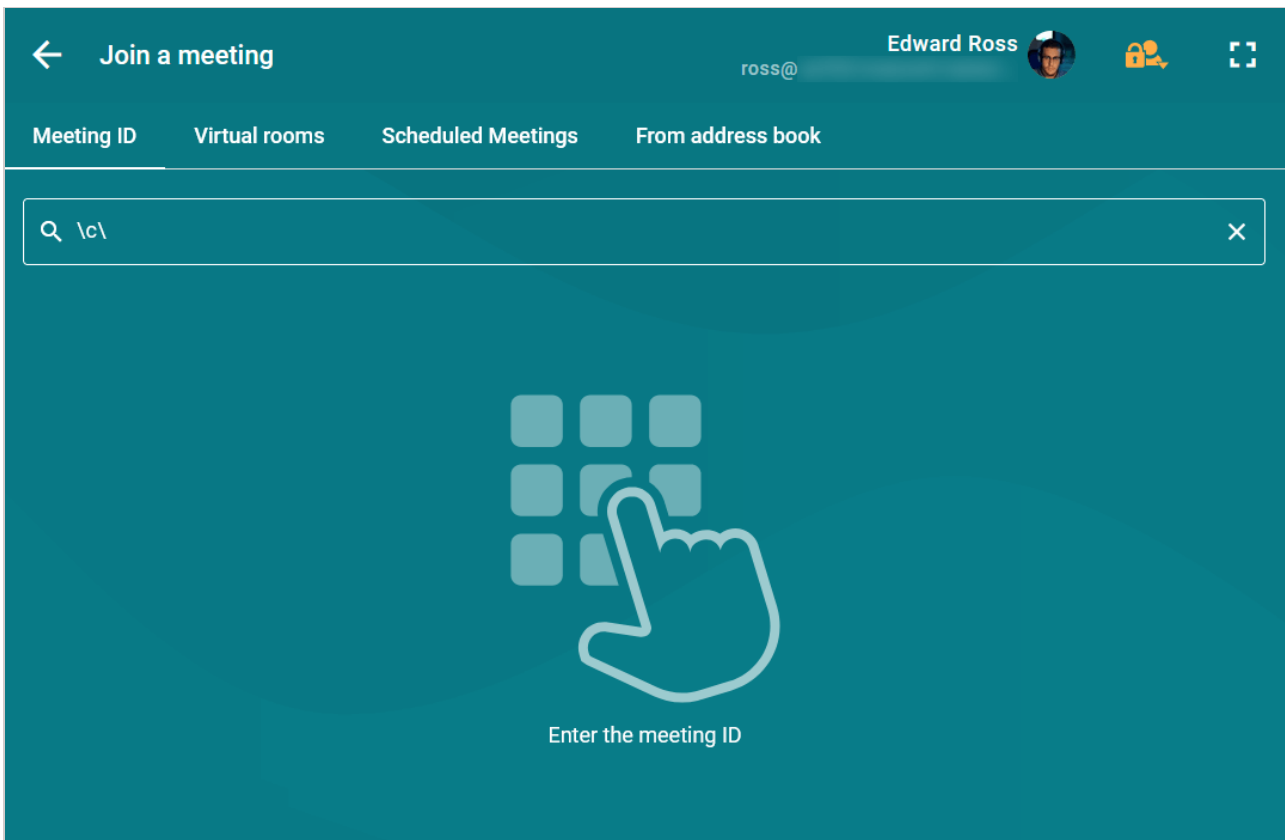

#### 8.1.1. With a QR code



To use this feature, you will need to enable [QR code scanning](#).

Follow these instructions to join a conference with a QR code:

1. Open the conference page on your mobile device.
2. Tap on the **QR code** button.
3. Bring the image close to the TrueConf Room camera.

### 8.2. How to create a conference

You can create a conference on the fly, configuring a minimum of settings. Click the **Ad-hoc meeting** button to be taken to a new conference in the all on screen mode.



It is possible to create a conference with additional parameters, e.g., with a PIN. You can do it in the user [personal area](#). To open it, go to **Settings** → **Account** and click on the **Go to personal area** button.

To create a conference in regular mode:

1. [Log in to the control panel](#).
2. Click the **Create a meeting** button.
3. Enter a name and select a [conference mode](#).
4. Add conference participants in the **Conference participants** section.
5. Check the **Automatically approve conference join requests** box to have participants join a conference without confirmation.




You can also add [video conferencing endpoints, IP cameras and other devices](#) to the list of conference participants.

6. Click **Start** in the lower right corner.




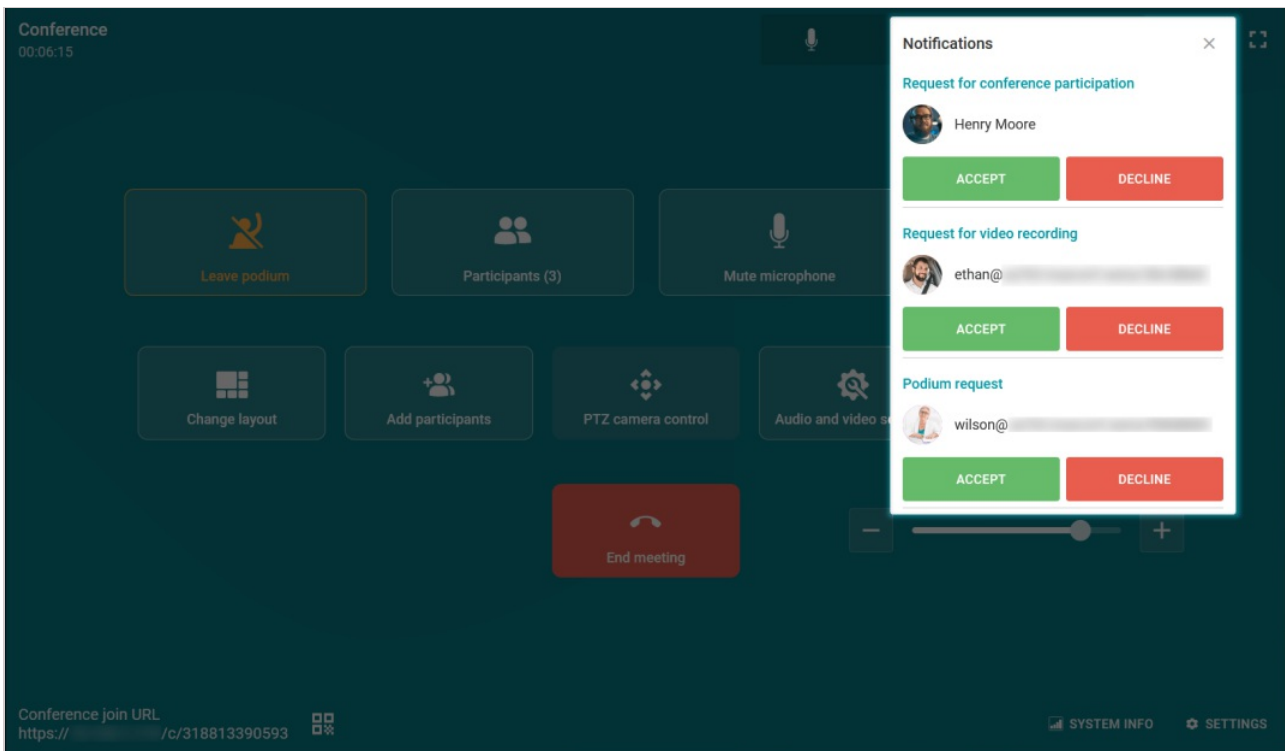
You can save the settings of a conference as a template (e.g., you can save its mode, list of participants and settings for automatic join requests). Later, you can use this template to create a new conference. Conference history is displayed on the left.

Done! In are now in the conference. In the control panel, you can see quick panel designed for managing your event. Just wait for the others to join it.

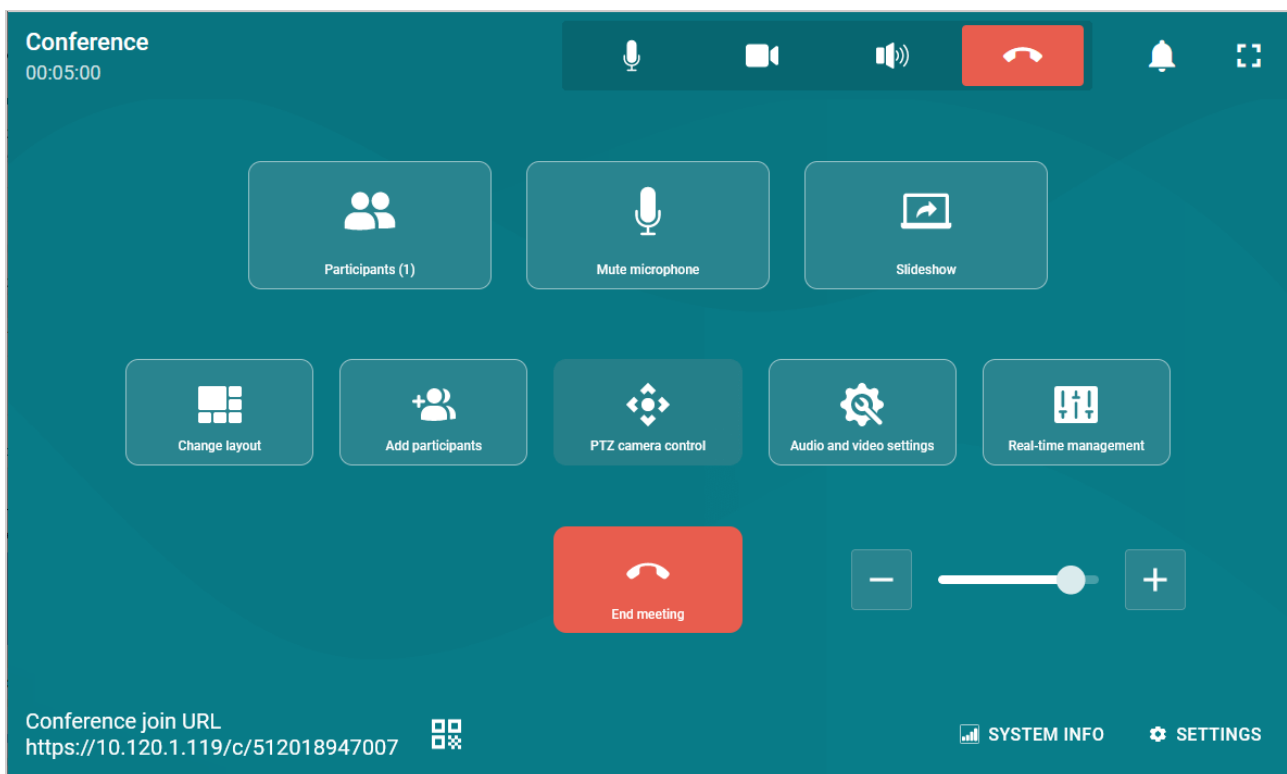


## 9. Notification center

During a conference, you can receive the request to record your video window. If you are a moderator, you can receive podium requests or notifications about new participant joining your meeting. You can see all requests in the upper right corner in the notification center. Click the  button to view your current notifications.





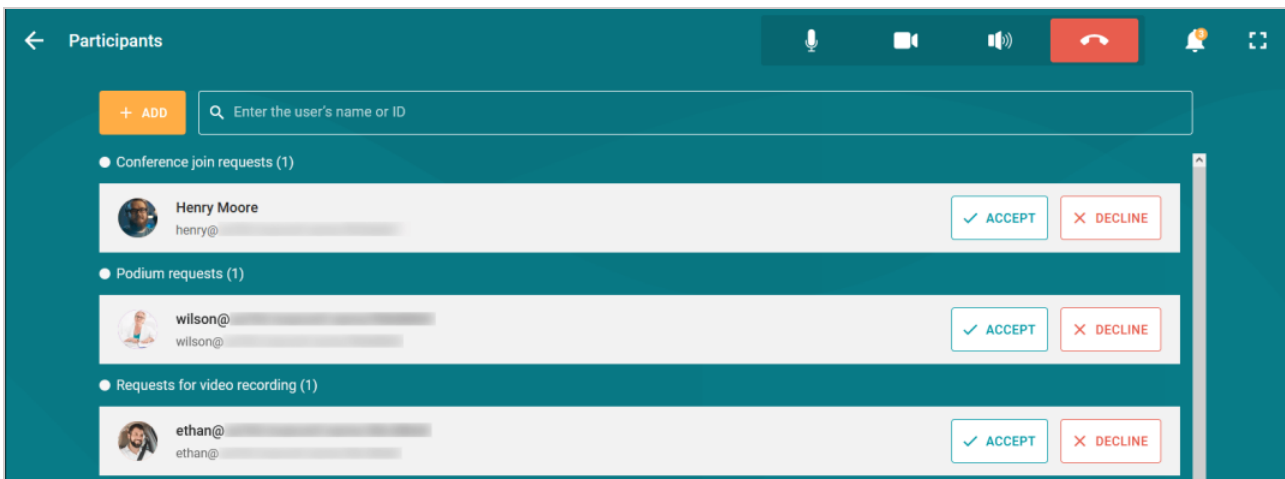

Besides, pending requests from other users are displayed in the [list of conference participants](#).




## 10. How to interact with a list of participants

### 10.1. View the list of participants

To open a list of all participants during an event, click the **Participants** button. The following features are available:

- Viewing a list.
- A moderator can use the buttons  and  to turn the camera and microphone on or off. By clicking the button , the moderator will be able to stream a participant's video [via NDI](#), view information about this participant, appoint this person as moderator, and send [DTMF commands](#). Besides, it is possible to remove the participant from a conference by clicking on the button .

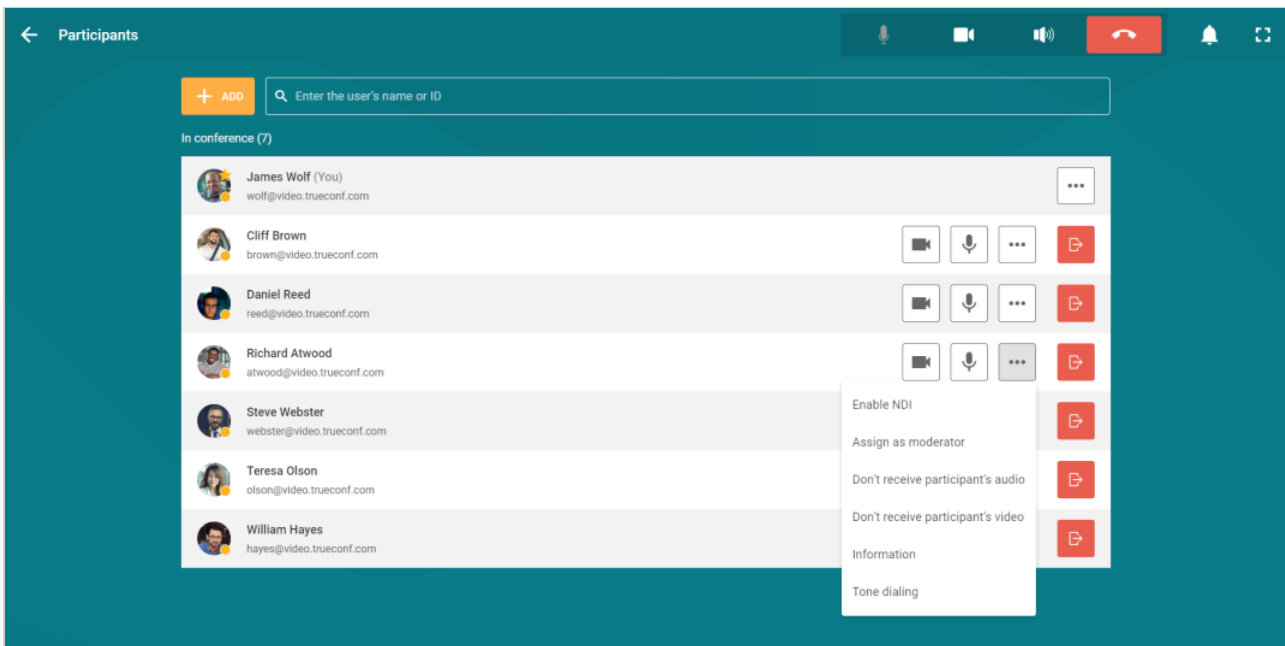

### 10.2. Adding participants

To add new participants, take the following steps:

1. Click the **Add participants** button in the conference control panel.
2. In the pop-up window, you will have access to several tabs [to add a user or device to a conference](#).

Adding participants

All contacts

Phone


SIP

RTSP


H.323

Selected (2)


Q Enter the user's name or ID


Edward Ross  
ross@

✓

George Walker  
george@

✓

Danny Showmen  
showmen@

Rob Stanton  
stanton@

CANCEL

INVITE (2)



You can also invite users to join your conference by going to the [list of participants](#) and clicking the **Add** button.

### 10.3. Send DTMF command

With TrueConf Room, you can send DTMF commands to DTMF-compatible devices in [RTP EVENT](#) and [SIP INFO](#) modes right from the conference control panel. To learn more about the transmission of such signals, please read the documentation provided by the manufacturer for each device.

Tone dialing

Send a tone signal to  
Joe Smith

1

2

3

4

5

6

7

8

9


\*

0

#

There are two options to send DTMF commands:

### 10.3.1. Option 1

1. Open the **Participants** section by clicking on the corresponding button.
2. Click the  button next to the name of a participant and select **Tone dialing**.

### 10.3.2. Option 2


1. Open the **Change layout** section by clicking on the corresponding button.
2. Click the video window of a participant to whom you want to send a DTMF command and select **Tone dial**.



To test DTMF signaling, you can use Public SIP URI of [The Test Call](#) website: `#sip:thetestcall@getonsip.com`. When DTMF commands have been sent, the robot reads out the digits you enter.

## 10.4. Managing and changing participants' audio and video devices

During a meeting, moderators (including the owner and operator) can remotely control participants' devices. To do it, click on the **Real-time management** button in the meeting control panel.

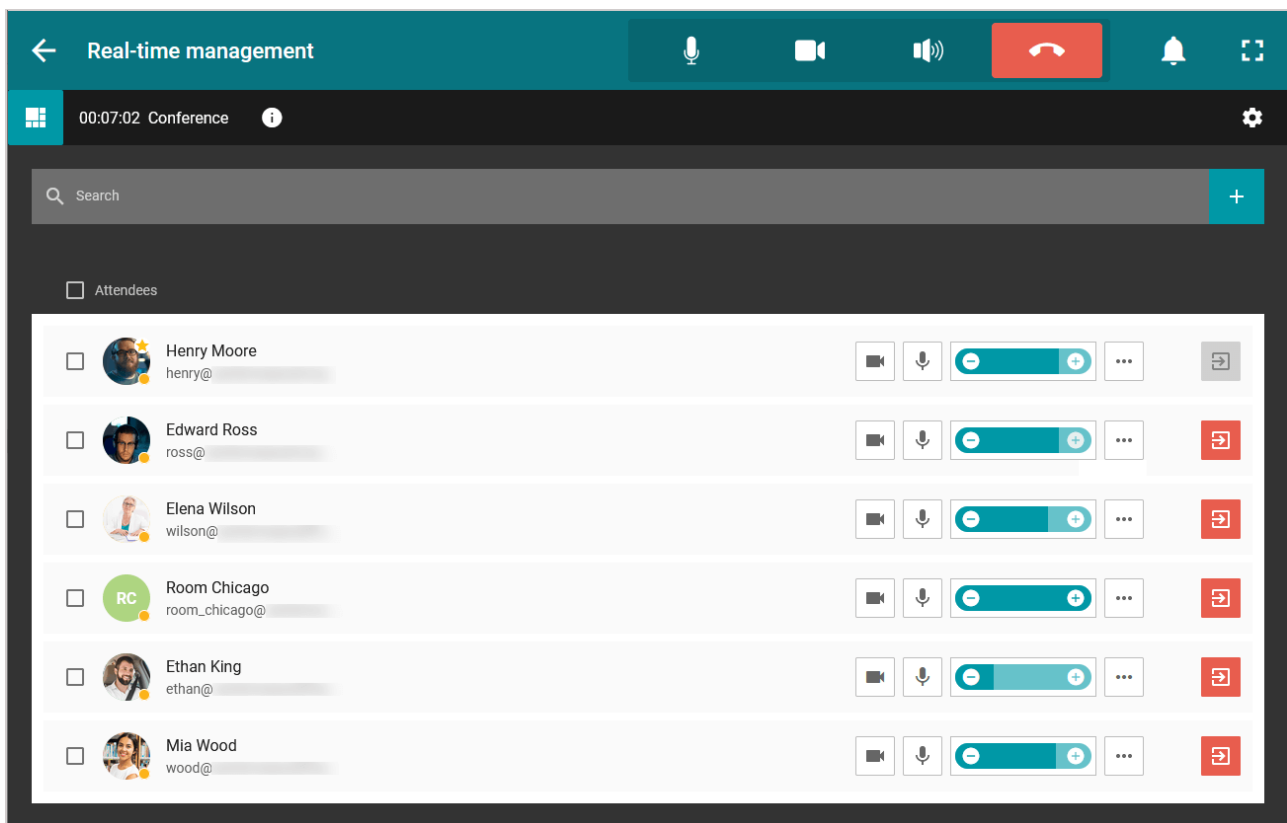

To learn more about how to interact with real-time meeting manager, please read our [documentation](#).




# 11. Conference layout management

## 11.1. Changing video layout

To select a video layout, you need to:

1. Click the **Change layout** button in the conference control panel.
2. In the panel below, click the **Layout type** button and then select how to position participants' video windows.

You can also broadcast the conference layout as an [NDI stream](#) in the local network.

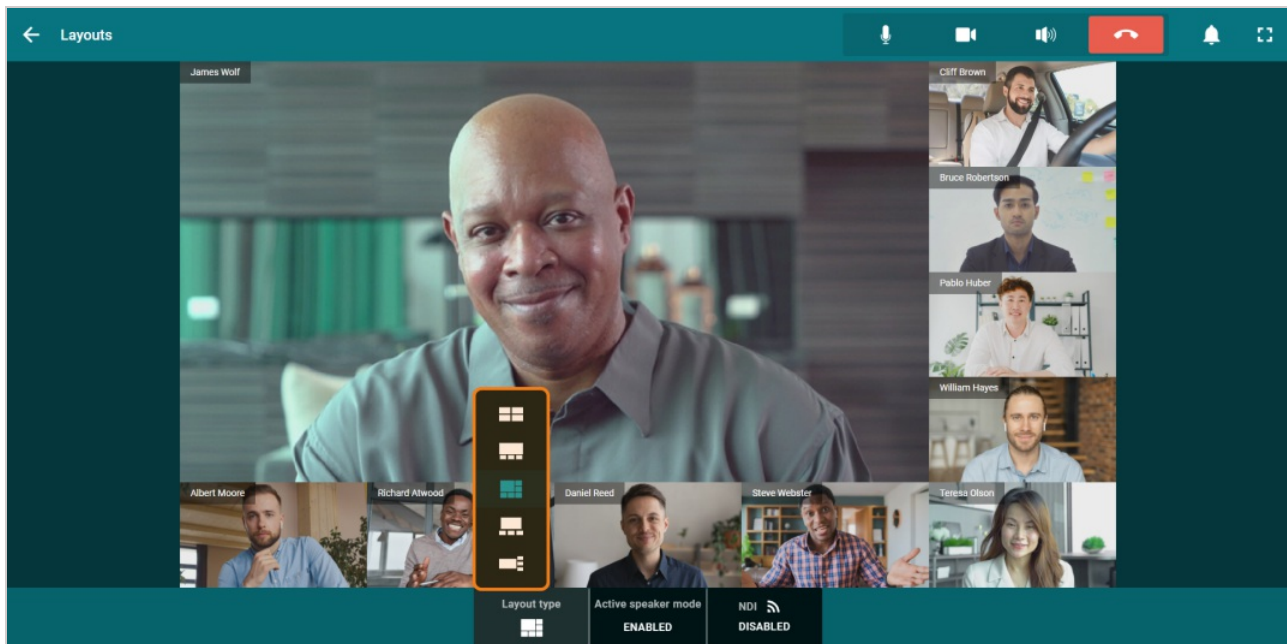

If you are one of the [conference moderators](#) (including the owner or operator), you can set the position of video windows as it is shown in the description of the private area in the [TrueConf Server user guide](#). To do it, click on the **Real-time management** button in the meeting control panel.

## 11.2. Changing the priority window


To select the priority window, go to [layout settings](#) and double click the video window of a conference participant. It will get larger than the rest of the windows. You can also enable the automatic change of the priority window. To this end, click the **Active speaker mode** button and select **Enable**.



Please note that the **Active speaker mode** feature is not available when the **Gallery view** layout has been set.

## 11.3. Dragging video windows to a different screen

TrueConf Room can work with multiple screens.

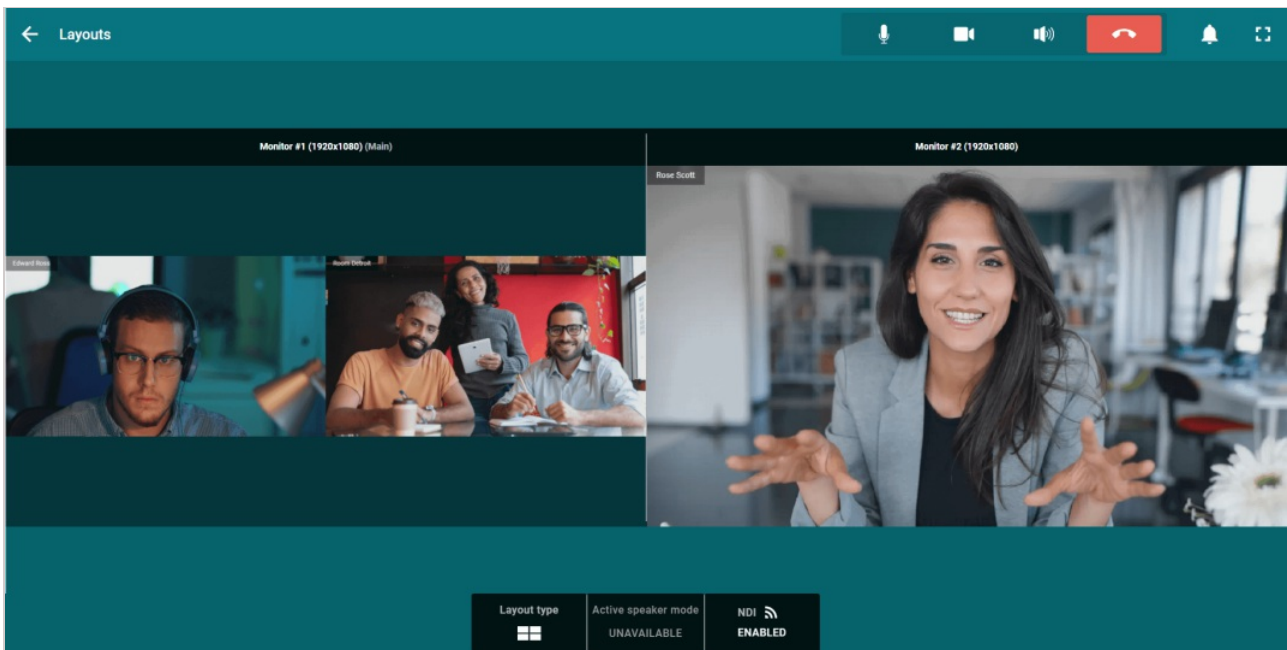

If there are several monitors connected to the computer with TrueConf Room installed, and some of them should not be displayed when selected, you can hide unnecessary ones using the `--ignore_monitor [monitor_number]` command line parameter, where `monitor_number` is the OS monitor number. For example, use the following key when launching an application via console:


```
"C:\Program Files\TrueConf\Room\TrueConfRoom.exe" --ignore_monitor 2
```

This will be useful when connecting the Logitech Tap touch controller to use the TrueConf Room control panel.

To show one of the conference participants or shared content on a separate display, you can use one of the following options.

### 11.3.1. Option 1

1. Click the **Change layout** button in the conference control panel.
2. Drag a separate window to your second display.

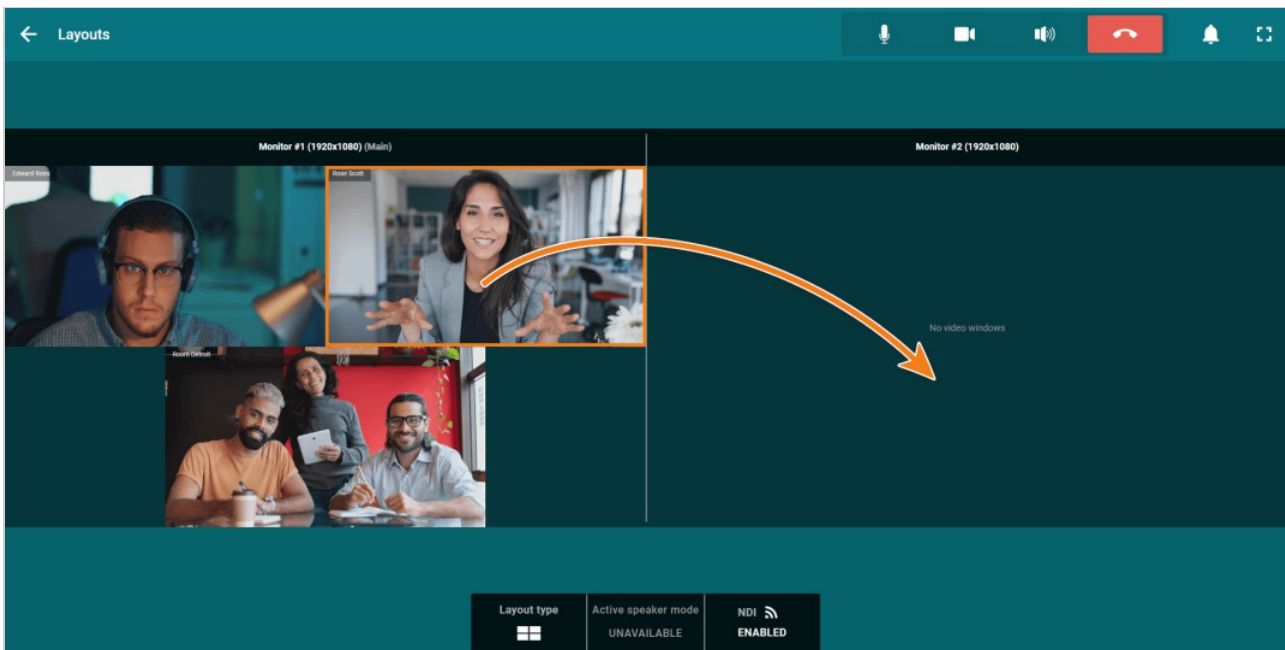

To return the video window to the main monitor, drag the window back to the main layout area.

### 11.3.2. Option 2

1. Click the **Change layout** button in the conference control panel.
2. In the pop-up window, click the participant's video window you want to drag to a separate display.
3. You will see a pop-up menu with a list of available monitors. Select the item that matches the required display.

## 12. Managing devices


### 12.1. Selecting devices

You can connect several video and audio capture sources to TrueConf Room.

To switch to another device, click the **Audio and video settings** button and set up the parameters [as shown above](#).

### 12.2. PTZ camera control

To adjust the settings a PTZ camera, click on the **PTZ camera control** button in the control panel. You will open the window with the camera controller and a list of presets.

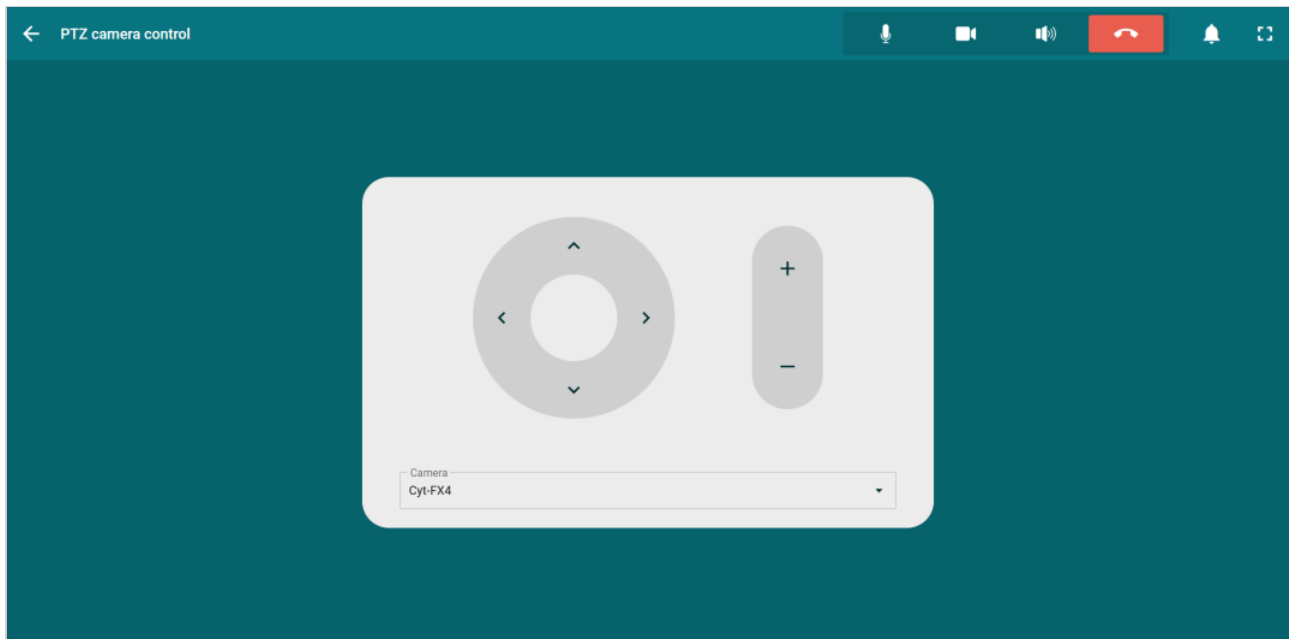


#### 12.2.1. Presets


With presets you can switch the positions of different cameras connected to TrueConf Room. To do it:

1. Go to the [PTZ camera control](#) section.
2. Select a camera in the drop-down list.
3. Click the **Save as preset** button.

In the list of presets, there will be fixed miniature frames from the camera selected when settings were last saved.

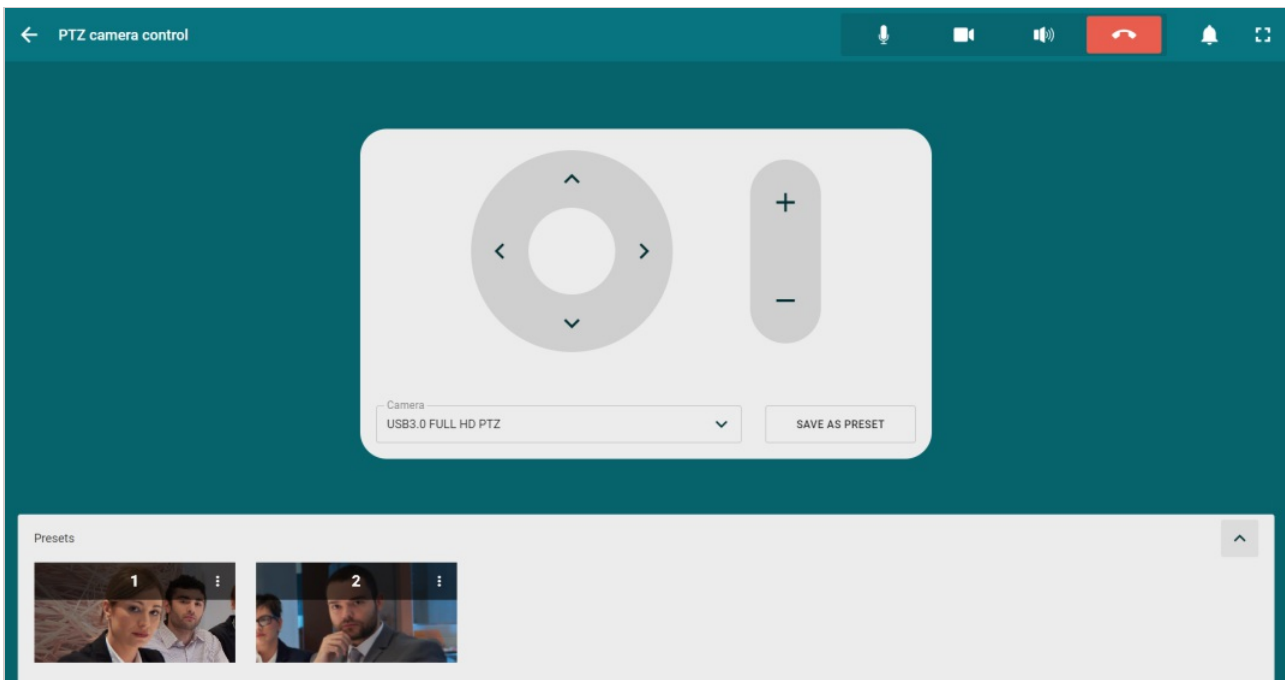

For ease of use, you can open the list of presets in the following way:

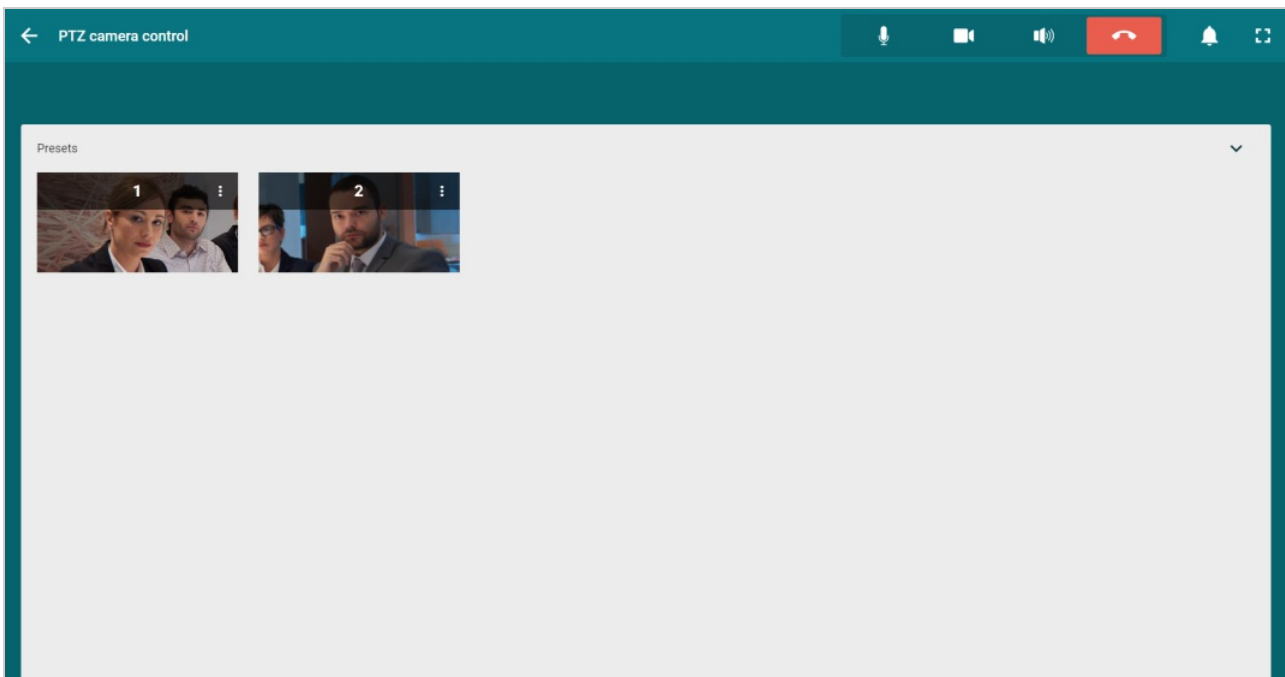

### 12.2.2. Gestures



This feature is available only when accessing the control panel from a device supporting touch input.


In addition to the PTZ camera control widget, you can use gestures (swipes), for example, if you connect Logitech Tap touch controller.

This control mode is available:

- During conferences in the [layout settings window](#)
- In the [settings](#) of a camera connected to the endpoint (both inside and outside meetings).

## 12.3. Controlling participant's camera

To start camera control, press the **Change layout** in the control panel and click the video window of a participant whose camera you would like to control. Next, in the pop-up menu, select **Remote camera control**. Once you have gained access, a video window with a camera control panel will pop up.

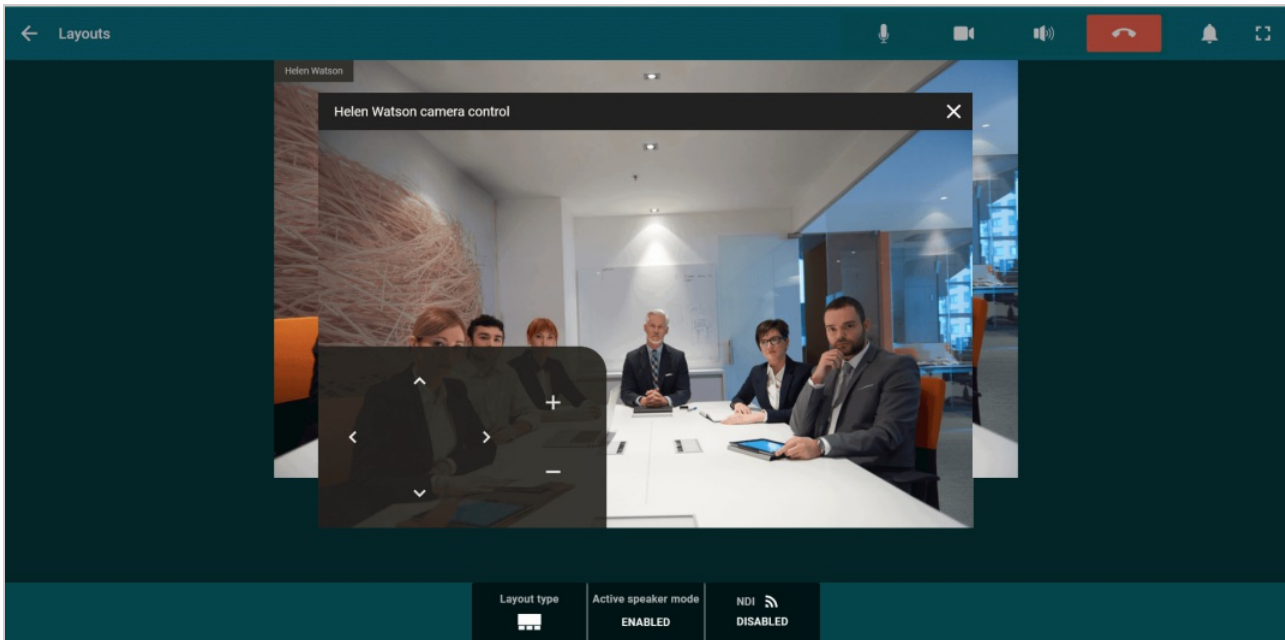

## 13. Sharing content and slides


With TrueConf Room, you can show slides during video conferences.

\* TrueConf Room allows the following formats for the slideshow: **jpg**, **jpeg**, and **png**. You can also import **ppt** and **pptx** slides. Besides, it is possible to use the slideshow in the special **slides** format (such files have to be saved in [TrueConf client application](#)).

You can upload an image or a slideshow in several ways:


- Before a conference. Go to the **Tools** → **Slideshow** section of the [settings sidebar](#).
- During a video conference. Click the **Slideshow** → **Slide management** → **Add slides** button in the conference control panel.


After that, you will see a window with the added slides:

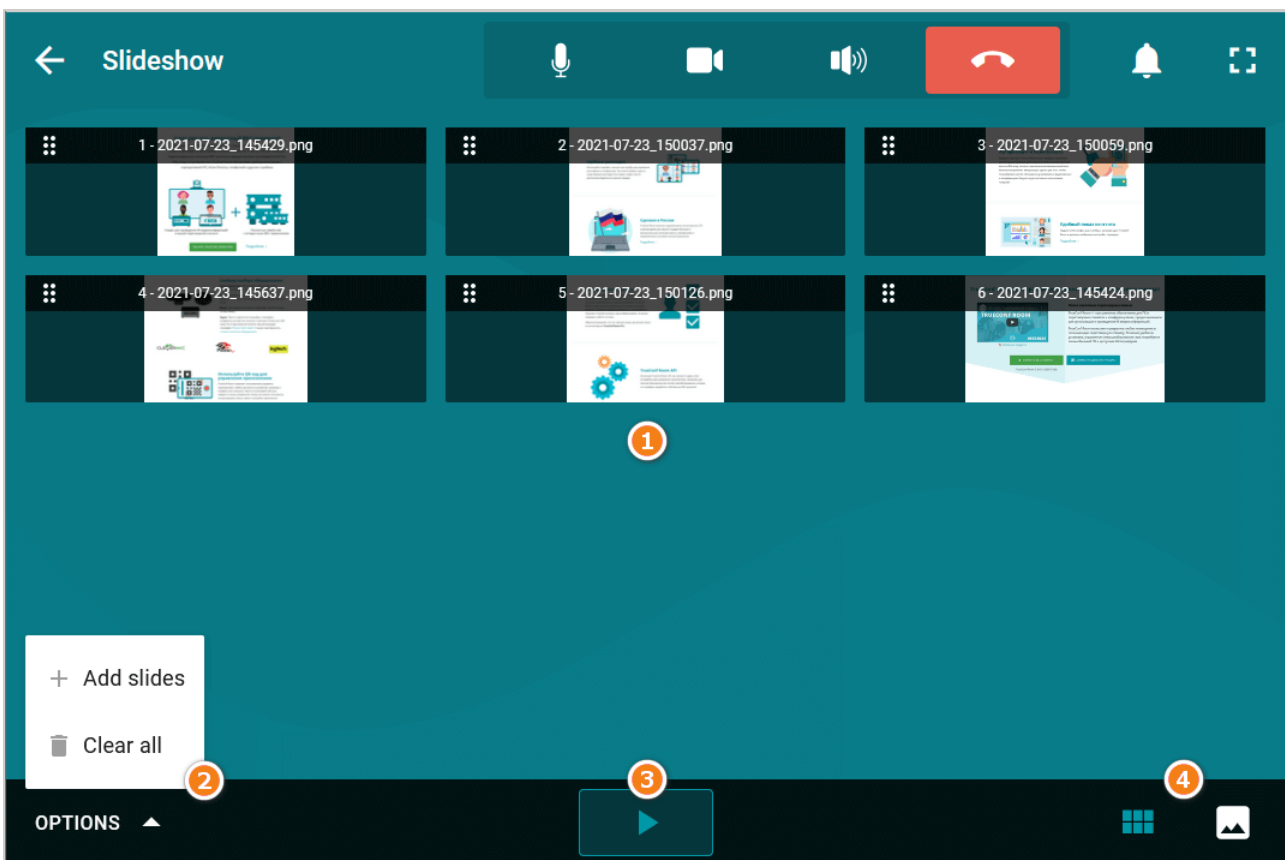


1. List of slides
2. Steps: **Add slides** and **Clear all**.
3. **Start** button for slideshow
4. Buttons to change the slide displayed: **thumbnails** and **\*\* one full-screen slide\*\***

i You can change the order of uploaded slides by dragging them.

To start the slideshow, click the  button at the bottom of the screen. The slides will expand to full screen:

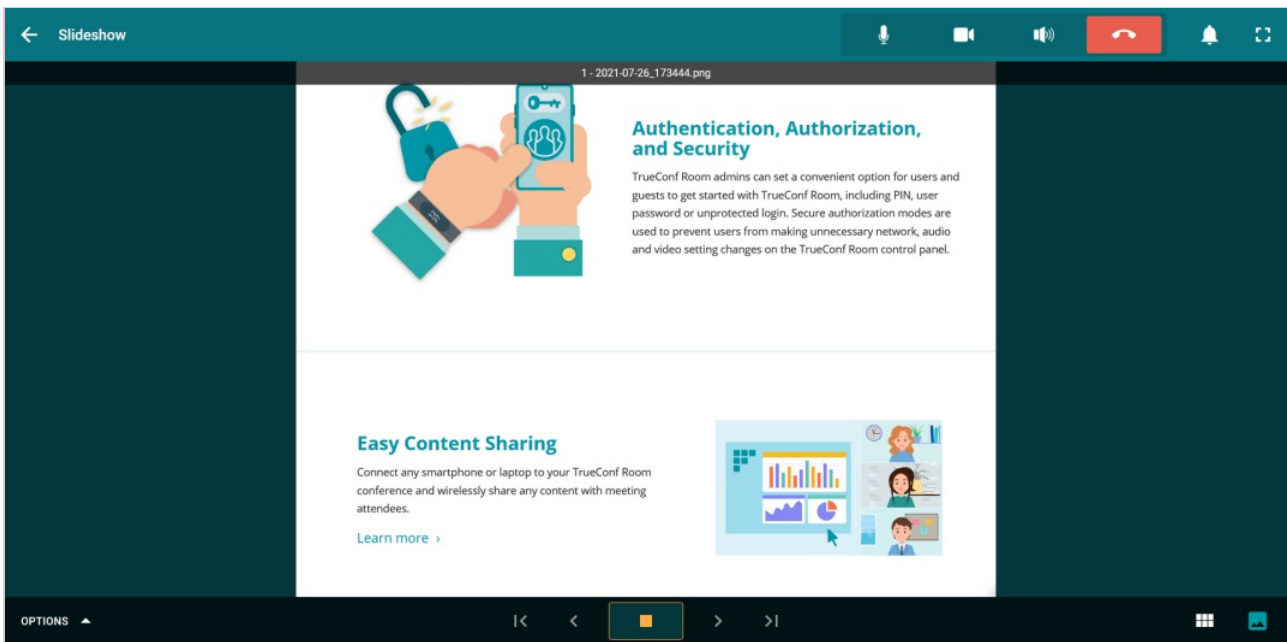

When viewing thumbnails, the shared slide has an icon  in the upper right corner. If you return to the conference control panel, a similar icon will flash on the **Slideshow** button.

With TrueConf Room, you can share content from a video capture card connected to your device. To this end, click the **Slideshow** button in the conference control panel and select **Switch to HDMI**. If more than one capture card is used in the system, a dialog box will appear to select the required one.

You can also switch to content sharing in the [hardware control menu](#) by choosing a capture card instead of your webcam.



## 14. Sending and receiving content via NDI

You can stream the entire conference layout or a separate video window via NDA in the local network. It is possible to broadcast multiple NDI streams in parallel.



It is not possible to broadcast a video window with shared content as a separate NDI stream.

### 14.1. Streaming the general layout

To stream the conference layout with audio, you will need to:

1. Click the **Change layout** button in the conference control panel.
2. Click on the **NDI** button in the lower part of the screen.
3. Click on the **Enable** button to confirm that you want to send a mixed stream via NDA.



### 14.2. Streaming a slideshow

To stream a slideshow, do the following:

1. Click on the **Slideshow** button in the meeting control panel.
2. Activate the switcher **Show slides via NDI** which is in the lower part of menu.

### 14.3. Streaming a participant's video window

To stream a participant's video window with audio, you will need to:

1. Click on the **Participants** button in the meeting control panel.
2. Click on the  button which is right next to a participant's name. Then select the **Enable NDI** option.
3. The participant will have the  status: it indicates that NDI has been enabled.

### 14.4. Receiving an NDI stream

To capture an NDI stream and send it to the conference layout, go to [device settings](#) and select the stream instead of the camera and/or microphone.



Please note that you will not be able to share video and audio from your camera and microphone when capturing an incoming NDI stream.

## 15. Additional settings

### 15.1. Preferences settings

In the **Settings** → **Preferences** section you can change the following settings:

- Incoming calls and conference invitation policies
- Restore the main screen window when you receive incoming calls
- Automatically approve podium requests (available for the meetings hosted on TrueConf Room)
- Automatically accept podium invitations sent by meeting moderators
- Display the names of meeting participants in the video layout.

### 15.2. Tools


In the **Settings** → **Tools** section you can:

- Set permissions for video recording
- [Enable QR code scanning](#)
- Enable NDI protocol
- Add slides before the [slideshow](#).

#### 15.2.1. QR code for joining a conference


To join a conference with a QR code, check the **Enable QR code scanning** box in **Settings** → **Tools** → **General** → **More**.

You will see a notification in the upper part of the main screen:

 QR code reader is now on. Please bring the QR code close to the camera.

### 15.3. System information

You can check the technical specifications of the device running TrueConf Room, including the monitoring data of an active connection or conference, in the **Settings** → **System info** section.

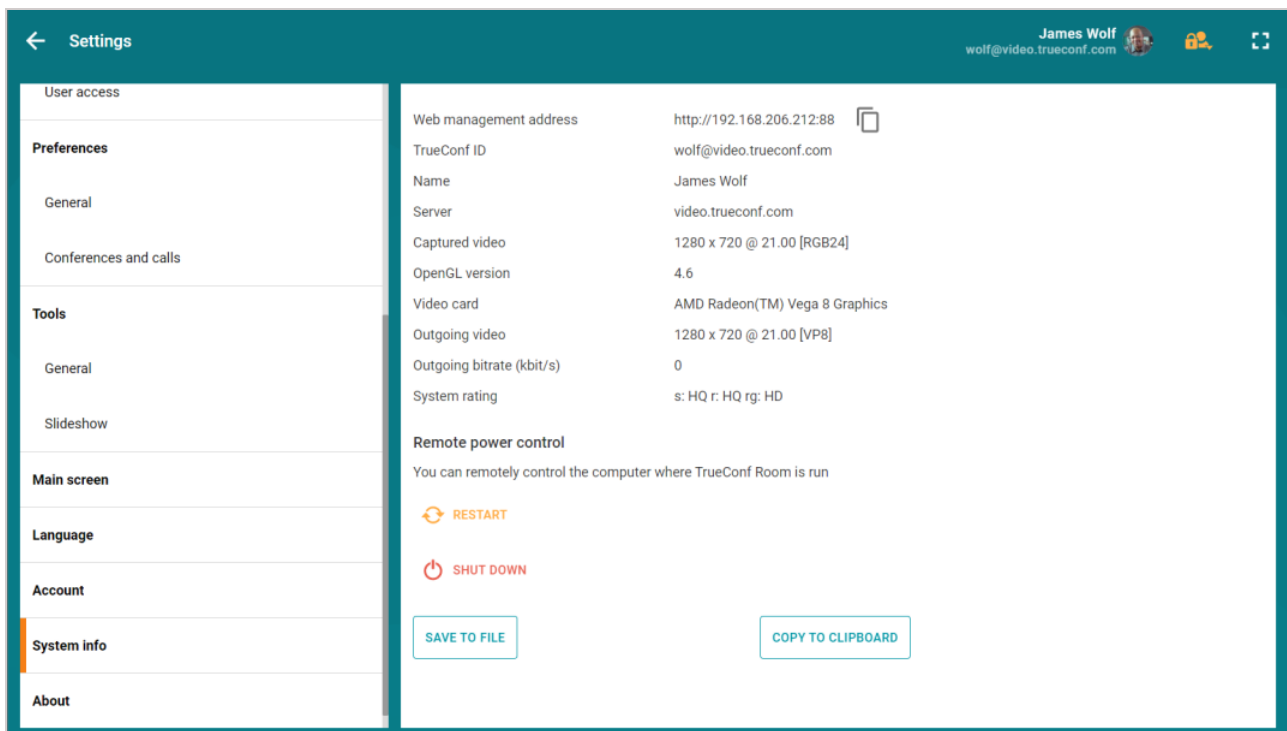

## 15.4. Device control

Here, in the **Settings** → **System info** section, you can remotely control the computer running TrueConf Room:

- Restart the device
- Disable it

## 15.5. Main screen view

The main display may be temporarily turned off due to some reason. In this case the OS will move the TrueConf Room main window to the second display. If you want TrueConf Room to switch to the first display automatically as soon as this display is turned on, you need to check the **Pin Main Screen on the current display** box.

With **TrueConf Room Pro**, you can adapt the **main screen view** to your preferences and corporate branding.

The main screen parameters are configured in the **Main screen** section of the settings menu.

Here you can set your own background for the video area. To this end, select the **Custom** in the **Video area background** and click the **Upload an image** button.



When setting a custom background, please pay attention to the pixel size of your image. It should match the resolution of the display that shows the application's main screen.

You can enable or disable:

- Logo



Select the **Custom** option and click the **Upload an image** button to use your logo. The supported image type is **svg**.

- Date and time
- Connection details



**Connection details** checkbox enables the display of a QR code and a link to the **control panel**. If you disable this checkbox, you will have to manually send this link to users in the meeting room.

- List of upcoming meetings
- Information about the current user
- Notifications about incoming calls and conference invitations.



If the **Incoming calls, conference invitations and join requests** box is checked, you will see information about the caller and the corresponding buttons on the main screen during calls.

## 16. Secure authorization

With the [TrueConf Room Pro plan](#), you can protect the application from unwanted login using a password.

Set out access rules for TrueConf Room in the **Security** section of the [settings sidebar](#).

- \* Below you can find our security implementation principles. To learn more about setup instructions, [read our article](#).

### 16.1. Security levels

There are various security levels:

- To limit user access to the [network settings](#), you can set out login rules for [administrators](#)
- To limit any access to the TrueConf Room control panel, you can set access rules for the [user mode](#).

### 16.2. Security types

TrueConf Room supports the following types of secure authorization:

- Password is a sequence of characters the administrator sets for security reasons. It should be entered manually each time you access the control panel. It is the only login method for [administrator mode](#).
- PIN code is a case-insensitive short sequence of characters generated automatically. Not only can it be entered manually, but it is also used to access the control panel via a link. It is a recommended login method for [user mode](#).

- i Please note that secure login for users is available only if it has been configured for administrators.

The link with a PIN code is represented in the following way: `[server]:[port]/[PIN]`, where:

- `[server]` — the address of a [local server](#) started by TrueConf Room (it can be viewed in the browser address bar [after authentication](#))
- `[port]` — the [port needed for accessing](#) the TrueConf Room control panel.

#### \* Example

If TrueConf Room works on the port `80` on a machine with `10.1.1.10` IP address, you will need to use this link `http://10.1.1.10:80/ABC` to access the control panel with a PIN code.


- \* If you set a PIN code for user mode, the PIN will be embedded in the [link on the main screen](#). This way, you can restrict access for users outside the meeting room, while meeting room participants won't need any additional measures to log in.


## 17. TrueConf Room Service

### 17.1. What TrueConf Room is used for

TrueConf Room Service is an additional program that makes it possible to set launch parameters for TrueConf Room. It enables administrators to:

- Select the screen for starting the application and displaying the control panel
- Configure the launch mode and select the location of the control panel on the screen
- Set a new URL for the control panel
- Set a custom PIN for starting the application
- Run any script when starting or closing the application
- Run the application with [command-line parameters](#).

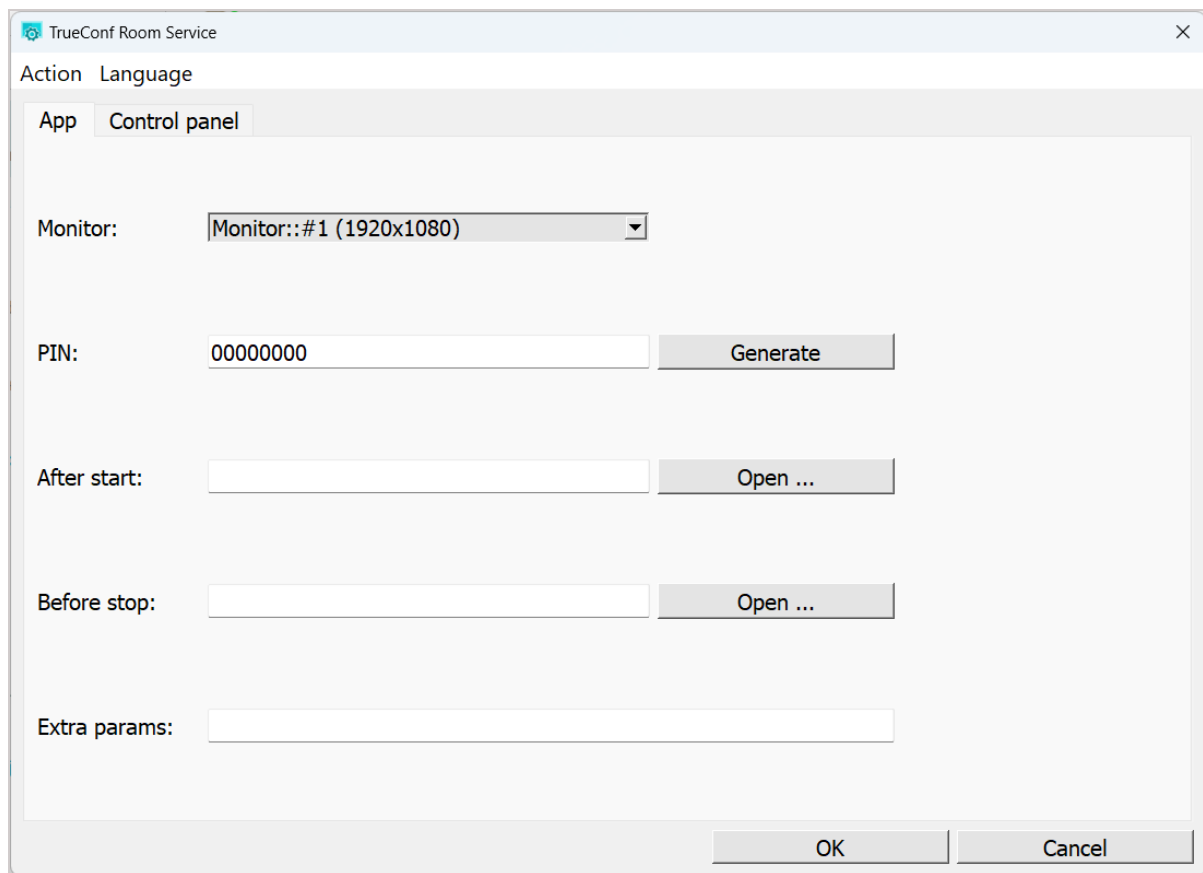

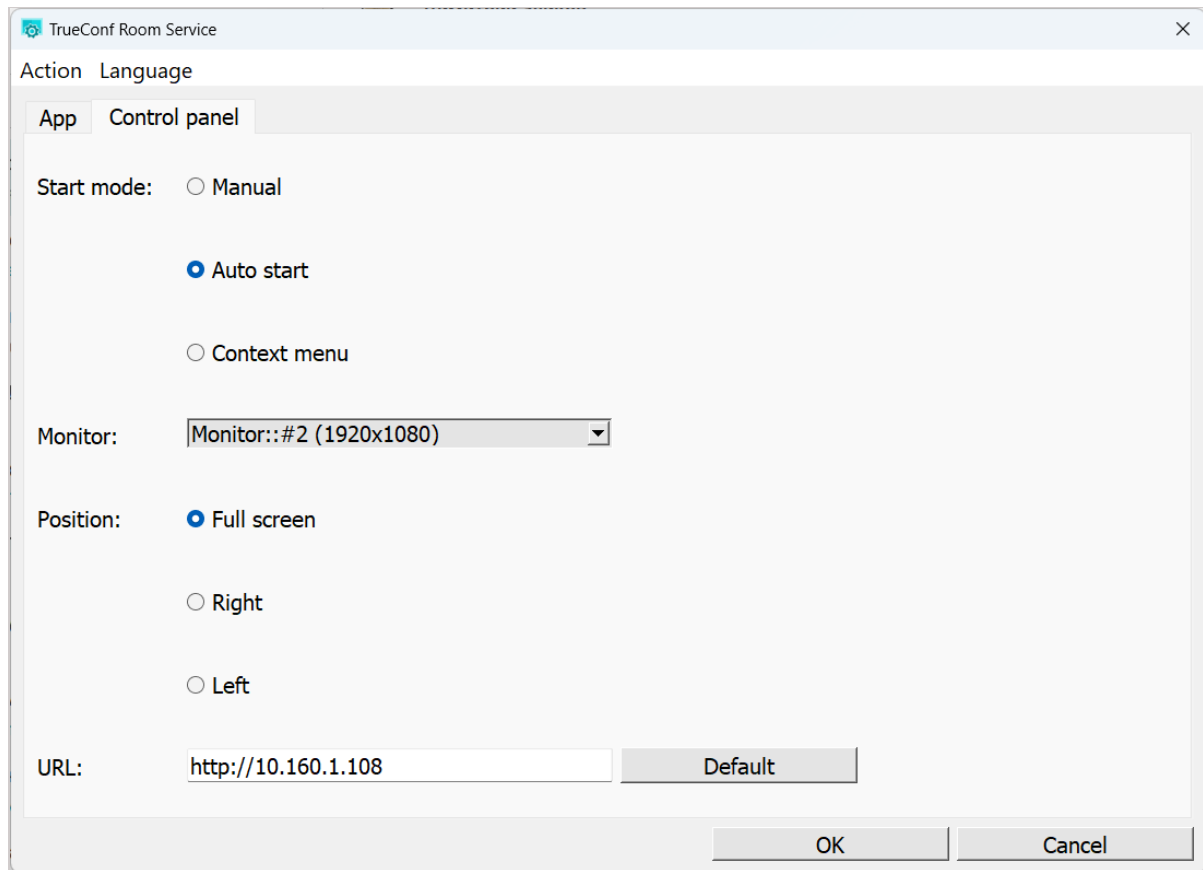

## 17.2. Launch parameters

TrueConf Room can be launched with [command-line parameters](#). You can use TrueConf Room Service to run the application automatically without the command line. To do it, go to the **App** tab and specify the options in the **Extra params** field. For example, to start the application with a [virtual background](#), enter the parameters as it is shown in this picture:

Extra params:

## 18. Room Discovery

### 18.1. What TrueConf Room is used for

TrueConf Room Discovery is an Android application which enables a user to quickly access the TrueConf Room control panel. TrueConf Room Discovery automatically detects the instances of TrueConf Room deployed in the local network and makes it much easier to interact with these instances.

### 18.2. Installation

Take the following steps to download the APK file:


1. Scan the QR code on the main screen with your smartphone to open the TrueConf Room control panel.
2. Go to **Settings** → **About** and tap on the **Download** button which will be displayed below.
3. The installation file will be downloaded on your device.
4. Allow to install applications from unknown sources (to learn more about it, [read our blog](#)). Then, install TrueConf Room Discovery.


### 18.3. Use

#### 18.3.1. Main screen

After opening the application, you will see the list of TrueConf Room instances deployed in the local network. The following information will be displayed:


1. The name of an instance: it will match the display name of the last authenticated user.
2. The IP address and port needed for accessing the instance.
3. The date when the instance was last used with the help of TrueConf Room Discovery.

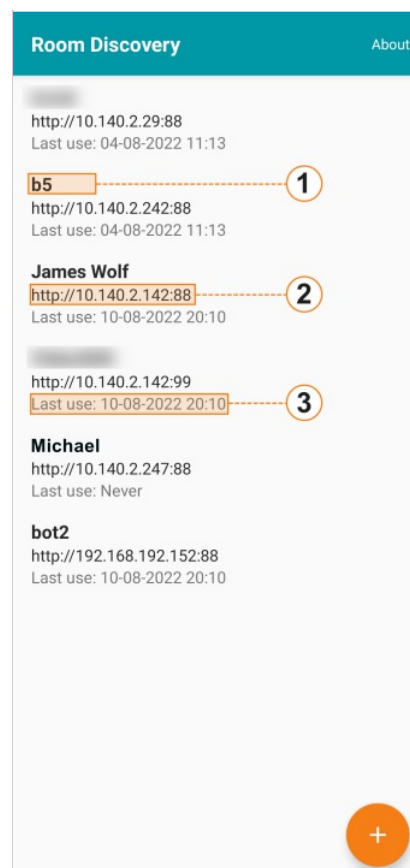

If due to some reason, the instance was not automatically detected, you can add it manually. To do it, tap on the  button and enter Room Web Url (the address needed for accessing the control panel) and name. If it is necessary, enter TrueConf Room Controller and tap on the **Add** button.

### 18.3.2. Control panel

To access the control panel, select the instance from the list on the TrueConf Room Discovery main screen. In terms of the UI and features, this control panel will be identical to the panel available in the browser.

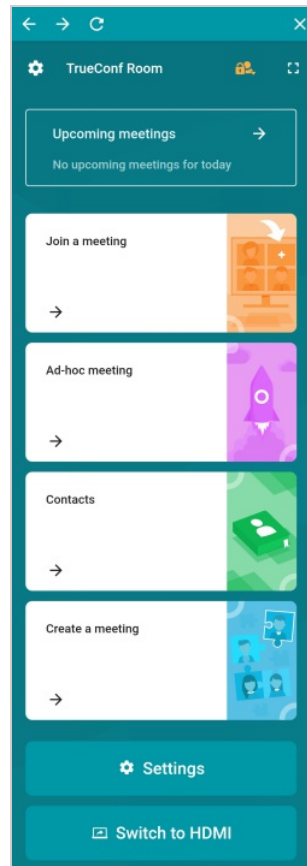



## 19. TrueConf Room PRO

### 19.1. What is TrueConf Room PRO?

This TrueConf Room plan offers more opportunities for using and customizing the application. You will be able to:

- log in [as a user](#)



With TrueConf Room Pro plan, you can set different access rights for meeting room users and admins or moderators you've sent a password to.

- [choose the elements](#) to be displayed on the main screen.
- [capture and broadcast NDI streams](#).

### 19.2. How to purchase TrueConf Room PRO

Depending on your server and the required number of connections, you could choose from several purchasing plans:

- if you are using the corporate TrueConf Server, you can bind the TrueConf Room Pro plan to the server by [purchasing this plan as a part of the TrueConf Server license](#). The TrueConf Room which is authorized on such a server will automatically get the TrueConf Room Pro status. Please note that only a limited number of applications connected to the server can have this status (this number depends on the server license);
- To activate TrueConf Room Pro on a separate device (including the devices connected to TrueConf Online), you need to contact TrueConf our sales department at [sales@trueconf.com](mailto:sales@trueconf.com).

You can view information about your license in the application settings on the **About** tab in the **System info** block. The **Activate PRO version** button is available if you are using the **FREE** plan.

### 19.3. Trial license activation

TrueConf Room Pro free trial is available to all TrueConf Room users and can be used for 21 days after the download. To do this:

1. Fill in the TrueConf Room [registration form](#) and indicate your email address to get a registration key.

## Download TrueConf Room

Please fill in this form to start download TrueConf Room.

Language: English

Company

Great Company

Valid format

Contact name

Joe Smith

Valid format

E-mail

smith@mail.company.com

Valid format

Contact phone

+1234567890

Format: +1(123)4567890 #123

Valid format

Country

United States

Valid format

☐ Please notify me about new releases, best practices and other TrueConf news.

☒ I accept the [Terms of Use](#) and [Privacy Policy](#).


We may use your email for sending automated notifications and product updates. [Learn more](#) about how TrueConf protects and uses your personal data.

Download TrueConf Room


Need help?

- [System requirements](#)
- [Contact Us](#)


2. Open [TrueConf Room control panel](#), go to **Settings** → **About** and click **Activate PRO version**:

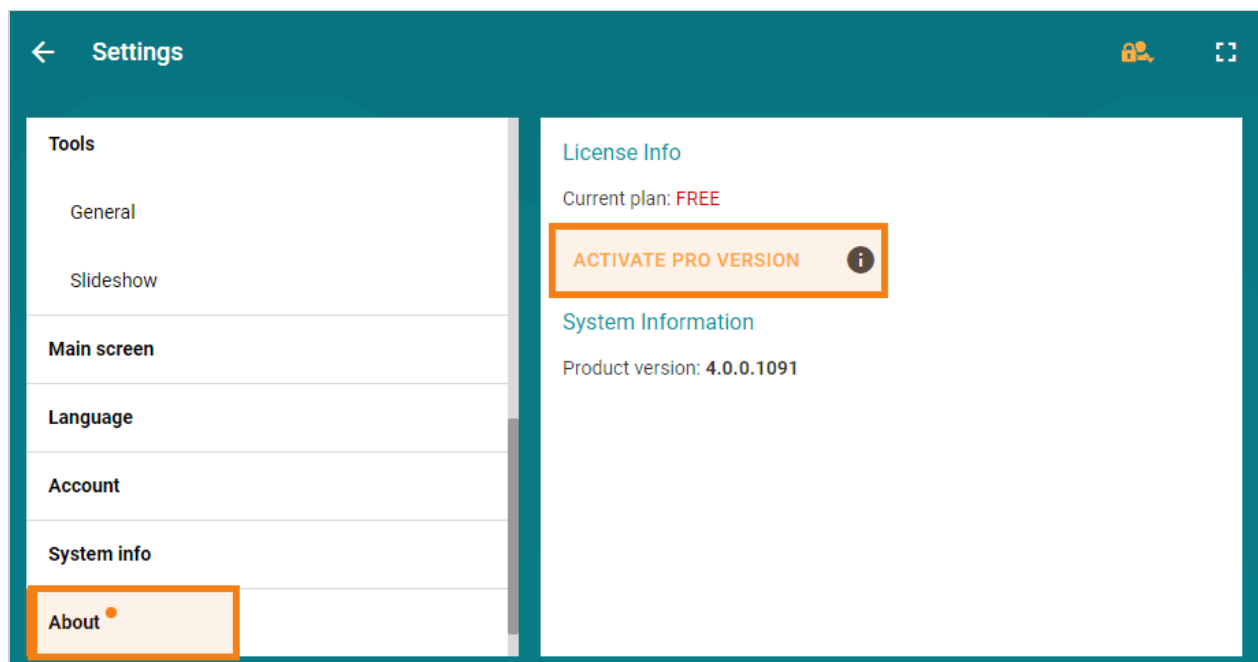

3. Enter the registration key from your inbox and click **Activate**:

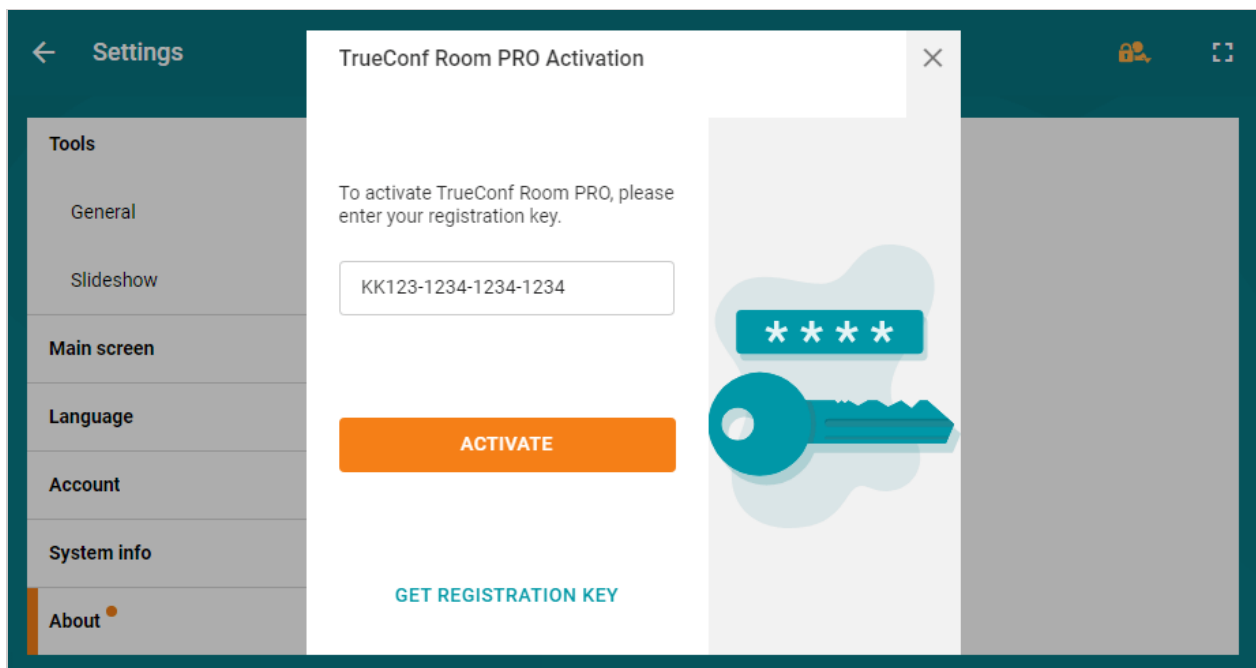

4. Make sure that you have switched to TrueConf Room Pro in your license information section:

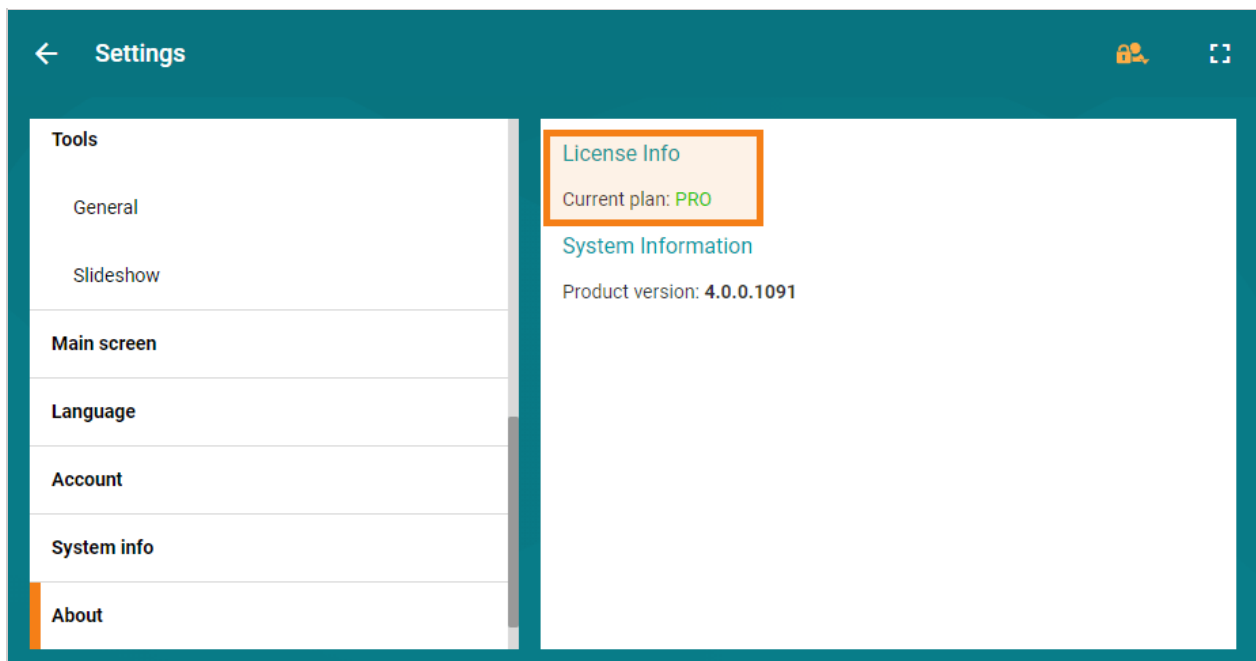


## 19.4. Offline activation



This feature is available for the administrator only if **there is no Internet connection**.

To activate your license, please follow these steps:

1. Click the **Activate PRO version** button.
2. Enter a registration key of your TrueConf Server.
3. Download a generated activation key.

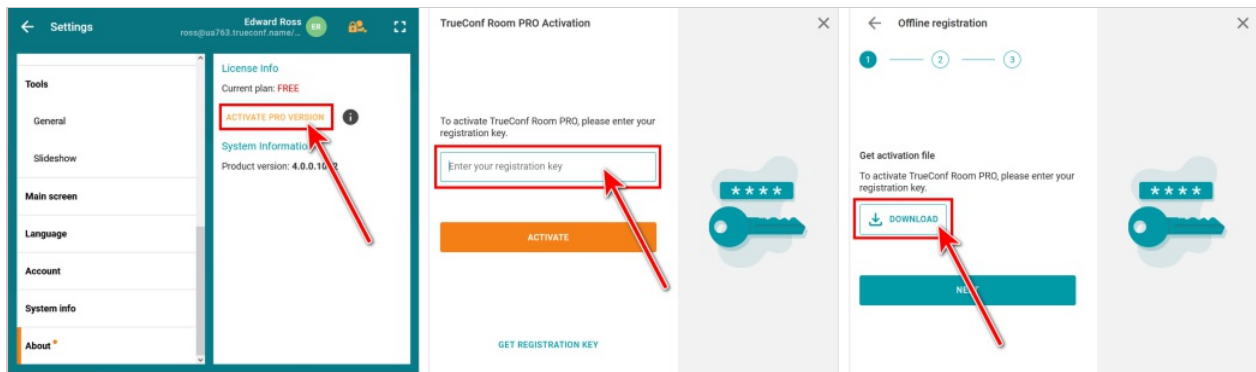

4. Send it by email and indicate **Activating TrueConf Room Pro** in the subject line.
5. Download a registration file you received in response.
6. Click the **Activate** button.

